

OPERATION MANUAL

INDUSTRIAL ENGINE

LV

L48V

L70V

L100V

YANMAR

**California
Proposition 65 Warning**

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects, and other reproductive harm.

Disclaimers:

All information, illustrations and specifications in this manual are based on the latest information available at the time of publishing. The illustrations used in this manual are intended as representative reference views only. Moreover, because of our continuous product improvement policy, we may modify information, illustrations and/or specifications to explain and/or exemplify a product, service or maintenance improvement. We reserve the right to make any change at any time without notice. YANMAR is a registered trademark of YANMAR POWER TECHNOLOGY CO., LTD. in Japan, the United States and/or other countries.

All Rights Reserved:

No part of this publication may be reproduced or used in any form by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of YANMAR POWER TECHNOLOGY CO., LTD.

In case of exporting this product and providing the related technical material to non-residents in Japan or residents in overseas, it is required to comply with the export and trade control laws and regulations of Japan and other relevant countries. Please be careful to proceed with necessary procedure.

OPERATION MANUAL	MODEL	L48V, L70V, L100V
	CODE	0ALV0-EN0022

INTRODUCTION

Welcome to the world of YANMAR Engines! YANMAR has been the leader in industrial diesel engines for over 90 years. We developed the world's first practical small-sized diesel engine in 1933. Our engineers are continuously developing new technology to keep YANMAR on the leading-edge of the industry. The L-V series engine is only one example of the new technology we have developed. We are committed to maintaining our environment, and are proud of our history of innovation, quality and respect for operator safety.

To help you enjoy your YANMAR L-V series engine for many years to come, please follow these recommendations:

- Read and understand this Operation Manual before you operate the machine to ensure that you follow safe operating practices and maintenance procedures.
 - Keep this Operation Manual in a convenient place for easy access.
 - If this Operation Manual is lost or damaged, order a new one from your authorized YANMAR industrial engine dealer or distributor.
 - Make sure this manual is transferred to subsequent owners. This manual should be considered a permanent part of the engine and remain with it.
- Constant efforts are made to improve the quality and performance of YANMAR products, so some details included in this Operation Manual may differ slightly from your engine. If you have any questions about these differences, please contact your authorized YANMAR industrial engine dealer or distributor.
 - The specifications and components (instrument panel, fuel tank, etc.) described in this manual may differ from ones installed on your machine. Please refer to the manual provided by the manufacturer of these components.

INTRODUCTION

RECORD OF OWNERSHIP

Take a few moments to record the information you need when you contact YANMAR for service, parts or literature.

Engine model: _____

Engine serial No.: _____

Date purchased: _____

Dealer: _____

Dealer phone: _____

YANMAR WARRANTIES

YANMAR LIMITED WARRANTY

What is Covered by this Warranty?

YANMAR warrants to the original retail purchaser that a new YANMAR L-V series industrial engine will be free from defects in material and/or workmanship for the duration of the warranty period.

This warranty is provided in lieu of all other warranties, express or implied. YANMAR specifically disclaims any implied warranties of merchantability or fitness for a particular purpose, except where such disclaimer is prohibited by law. If such disclaimer is prohibited by law, then implied warranties shall be limited in duration to the life of the express warranty.

How Long is the Warranty Period?

The YANMAR standard limited warranty period begins on the date of the delivery of the new YANMAR L-V series industrial engine to the first retail purchaser and extends for a period of **twenty-four (24) months or two-thousand (2000) engine operation hours**, whichever occurs first.

What the Engine Owner must Do:

If you believe your YANMAR engine has experienced a failure due to a defect in material and/or workmanship, you must contact an authorized YANMAR industrial engine dealer or distributor within thirty (30) days of discovering the failure. You must provide proof of ownership of the engine, proof of the date of the engine purchase and delivery, and documentation of the acceptable forms of proof of delivery date include, but are not limited to: the original warranty registration or sales receipts or other documents maintained in the ordinary course of business by YANMAR dealers and/or distributors, indicating the date of delivery of the YANMAR product to the original retail purchaser. This information is necessary to establish whether the YANMAR product is still within the warranty period. Thus, YANMAR strongly recommends you register your engine as soon as possible after purchase in order to facilitate any future warranty matters.

You are responsible for the transportation of the engine to and from the repair location as designated by YANMAR.

YANMAR WARRANTIES

YANMAR limited warranty - continued

To Locate an Authorized YANMAR Industrial Engine Dealer or Distributor:

You can locate your nearest authorized YANMAR industrial engine dealer or distributor by visiting the YANMAR website at:

<https://www.yanmar.com/global/> (The English language page will be displayed.)

- “Click” on “Dealer Locator” in the website heading to view the “Dealer Locator” menu.
- Choose the Country from the pull down menu.
- Choose the Product Category from the pull down menu.
- “Click” on “Search” to browse YANMAR dealer or distributor.

You may also contact YANMAR by clicking on “Contact” icon in the website heading and typing in your question or comment.

What YANMAR will Do:

YANMAR warrants to the original retail purchaser of a new YANMAR engine that YANMAR will make such repairs and/or replacements at YANMAR’s option, of any part(s) of the YANMAR product covered by this warranty found to be defective in material and/or workmanship. Such repairs and/or replacements will be made at a location designated by YANMAR at no cost to the purchaser for parts or labor.

What is not Covered by this Warranty?

This warranty does not cover parts affected by or damaged by any reason other than defective materials or workmanship including, but not limited to, accident, misuse, abuse, “Acts of God,” neglect, improper installation, improper maintenance, improper storage, the use of unsuitable attachments or parts, the use of contaminated fuels, the use of fuels, oils, lubricants, or fluids other than those recommended in your YANMAR Operation Manual, unauthorized alterations or modifications, ordinary wear and tear, and rust or corrosion. This warranty does not cover the cost of parts and/or labor required to perform normal/scheduled maintenance on your YANMAR engine. This warranty does not cover consumable parts such as, but not limited to, filters, belts, hoses, fuel injector nozzles, lubricants and cleaning fluids. This warranty does not cover the cost of shipping the product to or from the warranty repair facility.

YANMAR limited warranty - continued

Warranty Limitations:

The foregoing is YANMAR's only obligation to you and your exclusive remedy for breach of warranty. Failure to follow the requirements for submitting a claim under this warranty may result in a waiver of all claims for damages and other relief. **In no event shall YANMAR or any authorized industrial engine dealer or distributor be liable for incidental, special or consequential damages.** Such consequential damages may include, but not be limited to, loss of revenue, loan payments, cost of rental of substitute equipment, insurance coverage, storage, lodging, transportation, fuel, mileage and telephone costs. The limitations in this warranty apply regardless of whether your claims are based on breach of contract, tort (including negligence and strict liability) or any other theory. Any action arising hereunder must be brought within one (1) year after the cause of action accrues or it shall be barred. Some states and countries do not allow certain limitations on warranties or for breach of warranties. **This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.** Limitations set forth in this paragraph shall not apply to the extent that they are prohibited by law.

Warranty Modifications:

Except as modified in writing and signed by the parties, this warranty is and shall remain the complete and exclusive agreement between the parties with respect to warranties, superseding all prior agreements, written and oral, and all other communications between the parties relating to warranties. **No person or entity is authorized to give any other warranty or to assume any other obligation on behalf of YANMAR, either orally or in writing.**

Questions:

If you have any questions or concerns regarding this warranty, please call or write to the nearest authorized YANMAR industrial engine dealer or distributor or other authorized facility.

Retail Purchaser Registration

It is very important for the original retail purchaser to register the YANMAR product. Registration enables YANMAR to provide the best support for your YANMAR product.

At the time of purchase, YANMAR highly recommends registering the retail purchaser's information through website <https://www.yanmar.com> as soon as possible.

If it is not possible to access the website, please contact the nearest authorized YANMAR industrial engine dealer or distributor.

This Page Intentionally Left Blank

TABLE OF CONTENTS

	Page
INTRODUCTION	i
RECORD OF OWNERSHIP.....	ii
YANMAR WARRANTIES	iii
YANMAR LIMITED WARRANTY	iii
What is Covered by this Warranty?	iii
How Long is the Warranty Period?	iii
What the Engine Owner must Do:.....	iii
To Locate an Authorized YANMAR Industrial Engine Dealer or Distributor:	iv
What YANMAR will Do:	iv
What is not Covered by this Warranty?	iv
Warranty Limitations:.....	v
Warranty Modifications:.....	v
Questions:	v
Retail Purchaser Registration.....	v
TABLE OF CONTENTS	vii

TABLE OF CONTENTS

SAFETY	1
SAFETY STATEMENTS	1
SAFETY PRECAUTIONS	2
Before You Operate	2
During Operation and Maintenance	2
PRODUCT OVERVIEW	11
YANMAR L-V SERIES ENGINE FEATURES AND APPLICATIONS...	11
COMPONENT IDENTIFICATION	12
LOCATION OF LABELS	13
Engine Nameplate (Typical)	13
The EU Regulation Certified Label.....	13
Caution Label (Typical)	13
FUNCTION OF MAJOR ENGINE COMPONENTS.....	14
AIR COOLED ENGINE	15
CONTROLS - RECOIL STARTER.....	15
Recoil Starter.....	15
Decompression Lever	15
INDICATORS AND CONTROLS – ELECTRIC STARTER.....	15
Indicators.....	16
Controls	16
Inlet Air Heater	17
Engine Speed Controls	17
BEFORE YOU OPERATE	19
DIESEL FUEL	20
Diesel Fuel Specifications	20
Filling the Fuel Tank	21
ENGINE OIL.....	23
Engine Oil Specifications.....	23
Engine Oil Viscosity.....	23
Checking Engine Oil.....	24
Adding Engine Oil.....	24
Engine Oil Capacity (Typical)	24
DAILY CHECKS	25
Visual Checks.....	25
Check Diesel Fuel and Engine Oil.....	25
Check Engine Speed Control (First Time Only)	25
Check Indicators.....	25

ENGINE OPERATION	27
STARTING THE ENGINE	28
Recoil Start	28
Electric Start	30
CHECK THE ENGINE DURING OPERATION	32
ADJUST ENGINE SPEED	33
SHUTTING DOWN THE ENGINE.....	34
Preparing to Stop Engine	34
Set Engine Speed Control to STOP	35
Electric Start Models.....	36
After the Engine Stops.....	36
PERIODIC MAINTENANCE	37
PRECAUTIONS	38
The Importance of Periodic Maintenance.....	38
Performing Periodic Maintenance	38
The Importance of Daily Checks	38
Keep a Log of Engine Hours and Daily Checks	38
YANMAR Replacement Parts.....	38
Tools Required	38
Ask Your Authorized YANMAR Industrial Engine.....	38
Dealer or Distributor for Help.....	38
Required EU Regulation Maintenance	39
EU Regulation Installation Requirements.....	39
Tightening Fasteners.....	39
STANDARD TORQUE CHART	39
PERIODIC MAINTENANCE SCHEDULE	40
Periodic Maintenance Chart	40
PERIODIC MAINTENANCE PROCEDURES	42
Daily, Before Operation	42
Daily, After Operation	46
After Initial 50 Hours of Operation	48
Every 50 Hours of Operation	50
Every 200 Hours of Operation	51
Every 400 Hours of Operation	54
Every 1000 Hours of Operation	56
Every 1500 Hours of Operation	56
Every 2000 Hours of Operation	57
Every 3000 Hours of Operation	57
TROUBLESHOOTING	59
TROUBLESHOOTING CHART.....	60
TROUBLESHOOTING INFORMATION	62

TABLE OF CONTENTS

LONG TERM STORAGE	63
BEFORE YOU PLACE THE ENGINE IN LONG TERM STORAGE...	64
RETURNING THE ENGINE TO SERVICE	66
SPECIFICATIONS	67
GENERAL	67
Description of Model Number (Made in Italy)	67
Engine Speed Specifications.....	68
Engine General Specifications	68
PRINCIPAL ENGINE SPECIFICATIONS	69
Engine Specifications	69

SAFETY

SAFETY STATEMENTS

YANMAR is concerned for your safety and your machine's condition. Safety statements are one of the primary ways to call your attention to the potential hazards associated with YANMAR L-V series engine operation. Follow the precautions listed throughout the manual before operation, during operation and during periodic maintenance procedures for your safety, the safety of others and to protect the performance of your engine. Keep the labels from becoming dirty or torn and replace them if they are lost or damaged. Also, if you need to replace a part that has a label attached to it, make sure you order the new part and label at the same time.



This safety alert symbol appears with most safety statements. It means attention, become alert, your safety is involved! Please read and abide by the message that follows the safety alert symbol.

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE indicates a situation which can cause damage to the machine, personal property and/or the environment or cause the equipment to operate improperly.

SAFETY PRECAUTIONS

Before You Operate

NOTICE



- Never permit anyone to operate the engine or driven machine without proper training.

- Read and understand this Operation Manual before you operate or service the machine to ensure that you follow safe operating practices and maintenance procedures.
- Machine safety signs and labels are additional reminders for safe operating and maintenance techniques.
- See your authorized YANMAR industrial engine dealer or distributor for additional training.

During Operation and Maintenance

⚠ DANGER

Explosion Hazard!



- Keep the area around the battery well-ventilated. While the engine is running or the battery is charging, hydrogen gas is produced which can be easily ignited.
- Keep sparks, open flame and any other form of ignition away while the engine is running or battery is charging.
- Never short out the battery terminals, including when checking the remaining battery charge. This will result in a spark and may cause an explosion or fire. Use a hydrometer to check the remaining battery charge.
- If the electrolyte is frozen, slowly warm the battery before you recharge it.
- Failure to comply will result in death or serious injury.

⚠ DANGER

High Pressure Hazard!



- Do not loosen the high pressure pipe while the engine is running, even in low idle. This is dangerous because fuel under high pressure will blow out.
- Failure to comply will result in death or serious injury.

Prevent Machine Runaway!



- Do not start engine by shorting across starter terminals. Machine will start in gear if safety circuitry is bypassed.
- Never start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park position.
- Bypass start can cause machine to runaway. It can cause to serious injury or death.

Fire and Explosion Hazard!



- Diesel fuel is extremely flammable and explosive under certain conditions.
- When you remove any fuel system component to perform maintenance (such as changing the fuel filter) place an approved container under the opening to catch the fuel.
- Never use a shop rag to catch the fuel. Vapors from the rag are flammable and explosive.
- Wipe up any spills immediately.
- Wear eye protection. The fuel system is under pressure and fuel could spray out when you remove any fuel system component.
- Only use the key switch to start the engine.
- Never jump start the engine. Sparks caused by shorting the battery to the starter terminals may cause a fire or explosion.

⚠ DANGER (Continued)

- Only fill the fuel tank with diesel fuel. Filling the fuel tank with gasoline may result in a fire and will damage the engine.
- Never refuel with the engine running.
- Keep sparks, open flames or any other form of ignition (match, cigarette, static electric source) well away when refueling.
- Never overfill the fuel tank.
- Fill the fuel tank. Store any containers containing fuel in a well-ventilated area, away from any combustibles or sources of ignition.
- Be sure to place the diesel fuel container on the ground when transferring the diesel fuel from the pump to the container. Hold the hose nozzle firmly against the side of the container while filling it. This prevents static electricity build-up which could cause sparks and ignite fuel vapors.
- Never place diesel fuel or other flammable material such as oil, hay or dried grass close to the engine during engine operation or shortly after shut down.
- Before you operate the engine, check for fuel leaks. Replace rubberized fuel hoses every two years or every 2000 hours of engine operation, whichever comes first, even if the engine has been out of service. Rubberized fuel lines tend to dry out and become brittle after two years or 2000 hours of engine operation, whichever comes first.
- Do not let fuel exceed the fuel level mark on the fuel filter (inlet) of the fuel tank filler port. The fuel oil may expand when the ambient temperature is high, and overflow the fuel tank cap.
- Never remove the fuel cap with the engine running.
- Never use diesel fuel as a cleaning agent.
- Failure to comply will result in death or serious injury.

⚠ DANGER**Crush Hazard!**

- When you need to transport an engine for repair, have a helper assist you to attach it to a hoist and load it on a truck.
- Never stand under a hoisted engine. If the hoist mechanism fails, the engine will fall on you, causing death or serious injury.
- Failure to comply will result in death or serious injury.

⚠ WARNING**Sever Hazard!**

- Keep hands and other body parts away from moving/rotating parts such as the cooling fan, flywheel or PTO shaft.
- Wear tight fitting clothing and keep your hair short or tie it back while the engine is running.
- Remove all jewelry before you operate or service the machine.
- Never start the engine in gear. Sudden movement of the engine and/or machine could cause death or serious personal injury.
- Never operate the engine without the guards in place.
- Before you start the engine make sure that all bystanders are clear of the area.
- Keep children and pets away while the engine is operating.
- Check before starting the engine that any tools or shop rags used during maintenance have been removed from the area.
- Failure to comply could result in death or serious injury.

⚠ WARNING

Exhaust Hazard!



- Never operate the engine in an enclosed area such as a garage, tunnel, underground room, manhole or ship's hold without proper ventilation.
- Never block windows, vents, or other means of ventilation if the engine is operating in an enclosed area. All internal combustion engines create carbon monoxide gas during operation. Accumulation of this gas within an enclosure could cause illness or even death.
- Make sure that all connections are tightened to specifications after repair is made to the exhaust system.
- Failure to comply could result in death or serious injury.

Alcohol and Drug Hazard!



- Never operate the engine while you are under the influence of alcohol or drugs.
- Never operate the engine when you are feeling ill.
- Failure to comply could result in death or serious injury.

⚠ WARNING

Exposure Hazard!



- Wear personal protective equipment such as gloves, work shoes, eye and hearing protection as required by the task at hand.
- Never wear jewelry, unbuttoned cuffs, ties or loose fitting clothing when you are working near moving/rotating parts such as the cooling fan, flywheel or PTO shaft.
- Always tie back long hair when you are working near moving/rotating parts such as a cooling fan, flywheel, or PTO shaft.
- Never operate the engine while wearing a headset to listen to music or radio because it will be difficult to hear the warning signals.
- Failure to comply could result in death or serious injury.

Burn Hazard!



- If you must drain the engine oil while it is still hot, stay clear of the hot engine oil to avoid being scalded. Make sure you wear eye protection.
- Keep your hands and other body parts away from hot engine surfaces such as the muffler, exhaust pipe, turbocharger (if equipped) and engine block during operation and shortly after you shut the engine down. These surfaces are extremely hot while the engine is operating and could seriously burn you.
- Failure to comply could result in death or serious injury.

⚠ WARNING**Burn Hazard!**

- Batteries contain sulfuric acid. Never allow battery fluid to come in contact with clothing, skin or eyes. Severe burns could result. Always wear safety goggles and protective clothing when servicing the battery. If battery fluid contacts the eyes and/or skin, immediately flush the affected area with a large amount of clean water and obtain prompt medical treatment.
- Failure to comply could result in death or serious injury.

High-Pressure Hazard!

- While the engine is running or right after the engine has stopped, there is still high-pressure fuel left in the fuel piping system. When you need to disassemble the fuel system, wait for 10 to 15 minutes after stopping the engine.
- If fuel is spraying out or leaking from broken fuel system such as high-pressure fuel injection lines, it may be in high-pressure. Avoid skin contact. High-pressure fuel can penetrate your skin and result in serious injury. If you are exposed to high-pressure fuel spray, obtain prompt medical treatment.
- Disassembling or repairing the fuel system shall be done by professionals such as the authorized YANMAR distributor or dealer.
- Failure to comply could result in death or serious injury.

⚠ WARNING**Shock Hazard!**

- Turn off the battery switch (if equipped) or disconnect the negative battery cable before servicing the electrical system.
- Check the electrical harnesses for cracks, abrasions, and damaged or corroded connectors. Always keep the connectors and terminals clean.
- Failure to comply could result in death or serious injury.

Make sure the engine is installed on a level surface. If a continuously running engine is installed at an angle greater than 20° (in any direction) or if an engine runs for short periods of time (less than 3 minutes) at an angle greater than 30° in any direction, engine oil may enter the combustion chamber causing excessive engine speed and generate white smoke. This may cause serious engine damage.

In addition, never operate the engine beyond the allowable inclination angle. It may cause the engine to overturn and this is very dangerous.

Failure to comply could result in death or serious injury.

Cautions when Stopping the Engine!

- Do not suddenly accelerate from a low-speed state which was right before stopping. The engine may rarely rotate reversely.
- If the reversing occurs, white smoke blows out from the air cleaner. In that case, immediately stop the engine, and inspect the air cleaner. If you find anything wrong, replace the parts.

⚠ WARNING

Entanglement Hazard!




- Stop the engine before you begin to service it.
- Never leave the key in the key switch when you are servicing the engine. Someone may accidentally start the engine and not realize you are servicing it. This could result in a serious injury.
- If you must service the engine while it is operating, remove all jewelry, tie back long hair, and keep your hands, other body parts and clothing away from moving/rotating parts.
- Failure to comply could result in death or serious injury.

Sudden Movement Hazard!

- Before engaging the transmission or PTO, warm up the engine for at least 5 minutes and then set the speed back to normal. Engaging the transmission or PTO at an elevated engine speed could result in unexpected movement of the equipment.
- Failure to comply could result in death or serious injury.

⚠ CAUTION

Flying Object Hazard!



- Always wear eye protection when servicing the engine and when using compressed air or high-pressure water. Dust, flying debris, compressed air, pressurized water or steam may injure your eyes.
- Failure to comply may result in minor or moderate injury.
- The main switch should always be kept in the ON position during operation.

NOTICE

Diesel Fuel

- Poor quality fuel can reduce engine performance and cause damage. Only use diesel fuels recommended by YANMAR for the best engine performance. The recommended fuel complies with the U.S. EPA and ARB protection guidelines.
- Only use clean diesel fuel.
- The fuel cetane number should be 45 or higher. If it is lower than 45, it may cause white exhaust smoke especially when the ambient temperature is low.
- Never remove inlet strainer from the filler port. If removed, dirt and debris could get into the fuel system causing it to clog.
- Keep the fuel tank and fuel-handling equipment clean at all times.

Engine Lubricating Oil

- Only use the engine lubricating oil specified. Other oils may affect warranty coverage, cause internal engine components to seize and/or shorten engine life.
- Prevent dirt and debris from contaminating the engine lubricating oil. Carefully clean the oil cap/dipstick and the surrounding area before you remove the cap.
- Never mix different types of engine lubricating oil. This may adversely affect the lubricating properties of the engine oil.
- Always keep the oil level between the upper and lower lines on the oil cap/dipstick.
- Never overfill the engine with engine lubricating oil. Overfilling may result in white exhaust smoke, engine overspeed or internal damage.
- Be sure to use YANMAR genuine filter for replacing the engine lubricating oil filter.

NOTICE**Inspecting and Starting**

If any problem is noted during the visual check, the necessary corrective action should be taken before you operate the engine.

Never hold the key in the START position for longer than 15 seconds or the starter motor will overheat.

After an unsuccessfully attempt allow the starter motor to cool down for 2 minutes.

After you start the engine, we recommend you to warm up the engine for 5 to 10 minutes without load.

This will prevent the wearing of engine components.

Never use an engine starting aid such as ether. Engine damage will result.

Never engage the starter motor while the engine is running. This may damage the starter motor pinion and/or ring gear.

NOTICE**Engine Break-in Period**

New engine break in:

- On the initial engine start-up, allow the engine to idle for approximately 15 minutes while you check for proper engine oil pressure, diesel fuel leaks, engine oil leaks, coolant leaks, and for proper operation of the indicators and/or gauges.
 - During the first hour of operation, vary the engine speed and the load on the engine. Short periods of maximum engine speed and load are desirable. Avoid prolonged operation at minimum or maximum engine speeds and loads for the next 4 to 5 hours.
 - During the break-in period, carefully observe the engine oil pressure and engine temperature.
 - During the break-in period, check the engine oil and coolant levels frequently.
-

Alarm System

If any indicator illuminates during engine operation stop the engine immediately. Determine the cause and repair the problem before you continue to operate the engine.

The illustrations and descriptions of optional equipment in this manual, such as the operator's console, are for a typical engine installation. Refer to the documentation supplied by the optional equipment manufacturer for specific operation and maintenance instructions.

NOTICE

Environment Conditions for Operation

Observe the following environmental operating conditions to maintain engine performance and avoid premature engine wear:

- Avoid operating in extremely dusty conditions.
- Avoid operating in the presence of chemical gases or fumes.
- Avoid operating in a corrosive atmosphere such as salt water spray.
- Never install the engine in a floodplain unless proper precautions are taken to avoid being subject to a flood.
- Never expose the engine to the rain.
- Never run the engine if the ambient temperature is above +104 °F (+40 °C) or below +14 °F (-10 °C)
 - If the ambient temperature exceeds +104 °F (+40 °C) the engine may overheat and cause the engine oil to break down with consequent heavy damages to the engine moving parts.
 - If the ambient temperature falls below +14 °F (-10 °C) rubber components such as gaskets and seals will harden causing premature engine wear and damage.
 - Contact your authorized YANMAR industrial engine dealer or distributor if the engine will be operated in either temperature extreme.
- Contact your authorized YANMAR industrial engine dealer or distributor if you need to operate the engine at high altitudes. At high altitudes the engine will lose power, run rough, and produce exhaust gases that exceed the design specifications.

-
- When the engine is operated in dusty conditions, clean the air cleaner element more frequently.
 - Never operate the engine with the air cleaner or element(s) removed or not properly fitted in its seat. This may cause foreign material to enter the engine and damage it.
 - Be sure to use designated element when replacing the air cleaner element.

NOTICE

The maximum air intake restriction shall be:

- L48V: 0.10 psi (0.69 kPa; 70 mmAq) or less
- L70V: 0.20 psi (1.37 kPa; 140 mmAq) or less
- L100V: 0.21 psi (1.47 kPa; 150 mmAq) or less

Clean or replace the air cleaner element if the air intake restriction exceeds the above mentioned value.

Engine Stop

For maximum engine life, YANMAR recommends that when shutting the engine down, you allow the engine to idle, without load, for 5 minutes. This will allow the engine components that operate at high temperatures, such as the turbocharger (if equipped) and exhaust system, to cool slightly before the engine itself is shut down.

High-pressure Cleaning

Protect the air cleaner, turbocharger (if equipped) and electric components from damage when you use steam or high-pressure water to clean the engine.

Periodic Maintenance

Establish a periodic maintenance plan according to the engine application and make sure you perform the required periodic maintenance at intervals indicated. Failure to follow these guidelines will impair the engine's safety and performance characteristics, shorten the engine's life and may affect the warranty coverage on your engine. *See YANMAR LIMITED WARRANTY on page iii.*

Consult your authorized YANMAR industrial engine dealer or distributor for assistance when checking items marked with a ●.


It is important to perform daily checks. *See DAILY CHECKS on page 25.*

Periodic maintenance prevents unexpected downtime, reduces the number of accidents due to poor machine performance and helps extend the life of the engine.

NOTICE

The tightening torque in the *Standard Torque Chart in the Periodic Maintenance Section of this manual* should be applied only to the bolts with a "7" head. (JIS strength classification: 7T)

- Apply 60 % torque to bolts that are not listed.
- Apply 80 % torque when tightened to aluminum alloy.

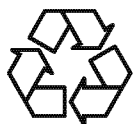

- Always be environmentally responsible.

- Follow the guidelines of the EPA or other governmental agencies for the proper disposal of hazardous materials such as engine oil, diesel fuel and engine coolant. Consult the local authorities or reclamation facility.
- Never dispose of hazardous materials irresponsibly by dumping them into a sewer, on the ground, or into ground water or waterways.
- Failure to follow these procedures may seriously harm the environment.

- Never attempt to modify the engine's design or safety features such as defeating the engine speed limit control or the fuel injection quantity control.
- Failure to comply may impair the engine's safety and performance characteristics and shorten the engine's life. Any alterations to this engine may affect the warranty coverage of your engine.
See YANMAR LIMITED WARRANTY on page iii.

Never attempt to adjust the low or high idle speed limit screw. This may impair the safety and performance of the machine and shorten its life. If adjustment is ever required, contact your authorized YANMAR industrial engine dealer or distributor.

NOTICE

Tips while starting engine with recoil starter (See *Start the engine on page 29.*):

- Pulling out the recoil starter handle too hard or fast will damage the equipment.
- Always pull recoil starter handle all the way out or the engine will not start.
- Never allow the recoil starter handle to snap back against the engine. Return the handle to the starting position gently to prevent damage to the recoil starter.

If the engine continues to run after you position the engine speed control to the STOP position, turn the fuel cock to the CLOSED position.

This Page Intentionally Left Blank

PRODUCT OVERVIEW

YANMAR L-V SERIES ENGINE FEATURES AND APPLICATIONS

To achieve the highest performing miniaturized and light-weight diesel engines, YANMAR POWER TECHNOLOGY CO., LTD. developed the L-V series single cylinder, air-cooled, diesel engine using the most advanced single cylinder technologies.

YANMAR L-V series engines are designed to supply power to a wide variety of driven machines including:

- Pumps
- Power generation
- Construction
- Agriculture

We are sure that you will agree these features provide excellent value in an industrial diesel engine.

These engines are designed to deliver power to driven machines by means of a “direct coupled drive” or “belt drive.” In direct coupled drive engine applications, the engine’s flywheel housing or end plate is coupled directly to the driven machine. In belt drive engine applications, a belt drive is used to power the driven machine.

The engine is designed for a wide range of applications. Options are available to customize the application.


Since designing the application and installing the engine require special knowledge and skill, always consult your authorized YANMAR industrial engine dealer or distributor for these services. They will help you:

- Select optional equipment. Optional equipment should be selected to match the work conditions and environment.
- Maximize engine performance with a minimum amount of downtime and safety related incidents by carefully matching the characteristics of the engine with the driven machine.
- Plan for safe fuel piping, exhaust piping, electrical wiring, ventilation and accurate engine installation.
- Design your applications so they meet requirements of the local authorities.

PRODUCT OVERVIEW

COMPONENT IDENTIFICATION

Figure 1 shows where major engine components are located.

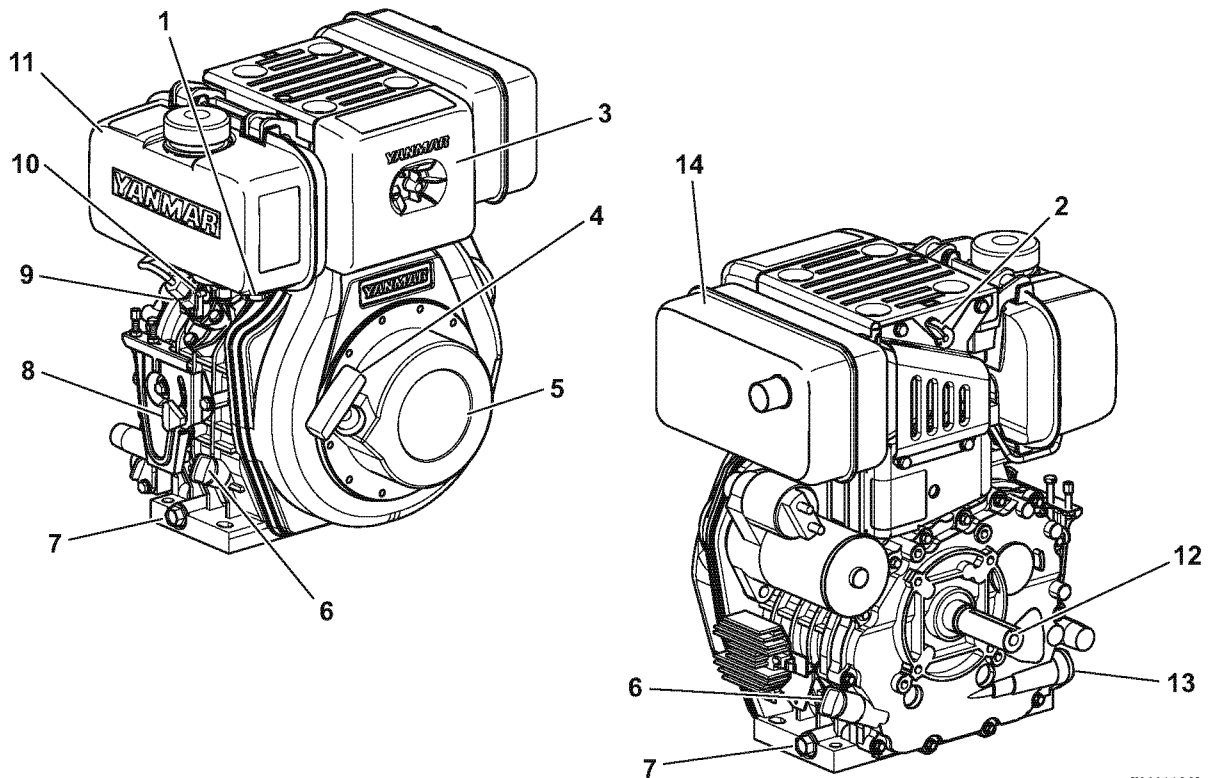

- 1 – Fuel drain plug
- 2 – Decompression Lever
- 3 – Air cleaner
- 4 – Recoil starter handle
- 5 – Recoil starter
- 6 – Oil cap/dipstick
- 7 – Oil drain plug

- 8 – Engine speed control lever
- 9 – Fuel injection pump
- 10 – Fuel cock
- 11 – Fuel tank
- 12 – PTO shaft
- 13 – Oil filter
- 14 – Muffler*¹

Figure 1

*Note: L48V standard engines are not equipped with covers.
L70V and L100V engines are represented in this manual.*

*L48V that conform to the European emissions standards (Labeled with EU certification) has a built-in oxidation catalyst (DOC) to the muffler (*1).*

LOCATION OF LABELS

Figure 2 shows the location of the engine nameplate, emission certification label and safety label on YANMAR L-V series engines.


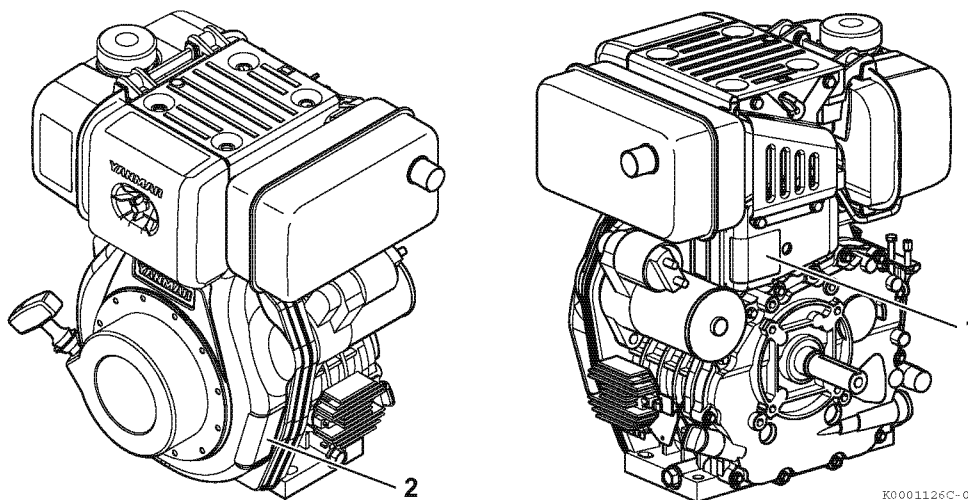


Figure 2

Engine Nameplate (Typical)


Typical location of the engine nameplate is shown (1, Figure 2).

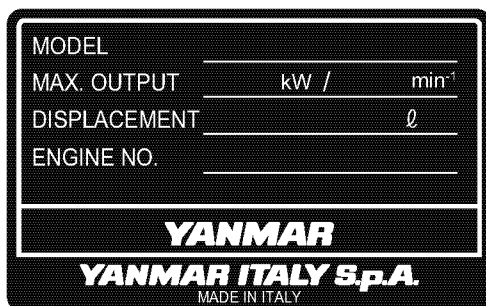

The EU Regulation Certified Label

The engines described in this manual have been certified by the EU Regulation 2016/1628. To identify the engines that meet this certification, the emission control label is affixed on the engines. (2, Figure 2).

Note: This regulation is the amending of 97/68/EC directive as Stage V.

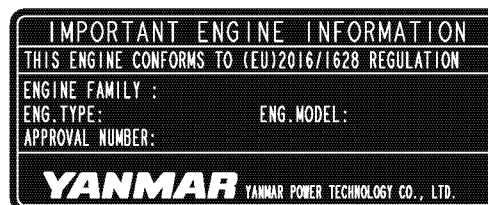

Caution Label (Typical)

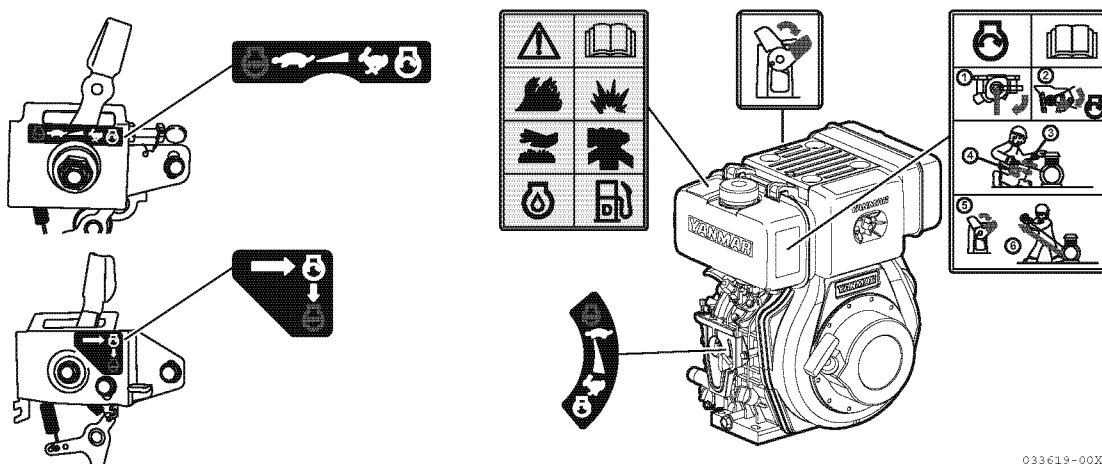


Figure 3

PRODUCT OVERVIEW

FUNCTION OF MAJOR ENGINE COMPONENTS

Components	Functions
Air cleaner	The air cleaner prevents airborne contaminants from entering the engine. Periodic replacement of the air cleaner filter element is necessary. See the <i>PERIODIC MAINTENANCE SCHEDULE</i> on page 40 for the replacement frequency.
Dynamo (optional)	If the engine is equipped with the electric starting option, a dynamo is located between engine body and flywheel. The dynamo supplies electricity to the engine systems and charges the battery while the engine is running.
Electric fuel pump (optional)	The electric fuel pump (if equipped) makes sure there is a constant supply of diesel fuel to the fuel injection pump. The electric fuel pump is electro-magnetic and runs on 12 V DC.
Engine oil filter	The engine oil filter removes contaminants and sediments from the engine oil. Periodic cleaning of the oil filter is necessary. See the <i>PERIODIC MAINTENANCE SCHEDULE</i> on page 40 for the frequency of cleaning.
Fuel filters	Two fuel filters are provided to remove contaminants and sediments from the diesel fuel. The inlet fuel screen is located inside the fuel tank filler port. Since it uses a mesh construction, it can be cleaned. The outlet fuel filter is a replaceable cartridge that is located at the outlet of the fuel tank. Periodic cleaning/replacement is required. See <i>PERIODIC MAINTENANCE SCHEDULE</i> on page 40.
Fuel tank	The fuel tank is a reservoir that holds diesel fuel. When fuel leaves the fuel tank it goes to the fuel injection pump. Since fuel is used to keep fuel system components cool and lubricated, more fuel than is necessary for combustion enters the fuel system. Any fuel that is not used for combustion is returned to the fuel tank. The fuel tank is a required engine component.
Oil cap/dipstick (engine oil)	The engine oil cap/dipstick combines the oil cap and dipstick in one assembly. The dipstick part of the assembly is used to determine the amount of engine oil in the crankcase.
Side filler ports (engine oil)	You can fill the crankcase with engine oil from either side of the engine depending upon which one is most convenient.
Starter motor (optional)	If the engine is equipped with the electric starting option, the starter motor is powered by the battery. When you turn the key switch in the operator's console to the START position, the starter motor engages with the ring gear installed on the flywheel and starts the flywheel in motion.
DOC (Diesel Oxidation Catalyst) (EU emission regulation certified L48V only*1)	EU certified L48V engine includes DOC, an exhaust gas cleaning device, to the exhaust muffler. This is an exhaust gas after treatment device for reducing CO, HC included in exhaust gas. Though this does not require special maintenance, do not disassemble or change anything of the device. Purification function may degrade.

*1: Engines that comply to the European emissions standards are labeled with EU certification.
(See LOCATION OF LABELS on page 13.)

AIR COOLED ENGINE

The L-V engine is air-cooled by means of a cooling fan. The cooling system consists of a fan attached to the flywheel.

CONTROLS - RECOIL STARTER

The L-V series engines are equipped with a recoil or electric starter. This section explains the controls available with the recoil starter.

Recoil Starter

A recoil starter allows you to manually start an engine by pulling on the recoil starter handle (1, **Figure 4**). When you pull on the handle you set the flywheel and crankshaft in motion. The recoil starter is spring loaded so the handle and attached cable automatically return to the recoil starter assembly.

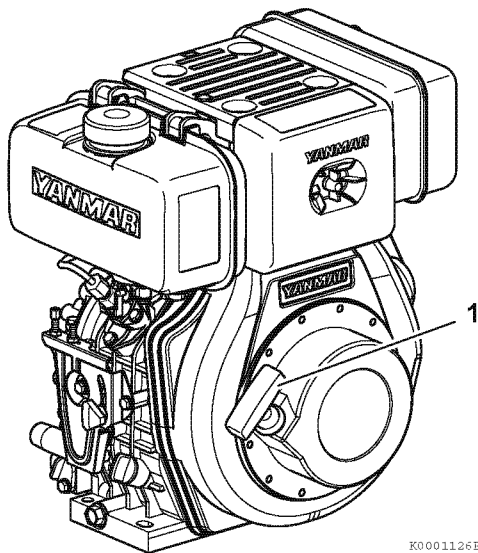


Figure 4

Decompression Lever

The decompression lever (1, **Figure 5**) helps you start the engine by reducing the effort needed to pull the recoil starter handle. The decompression lever will automatically return to the original position when the engine starts.

Some L-V model engines are equipped with an automatic, internal compression release mechanism and do not have the external compression release lever. Refer to the specific instructions for your driven machine.

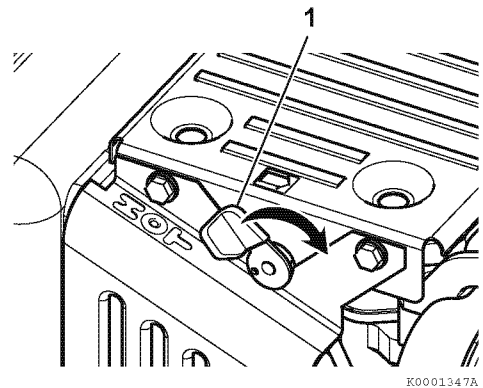


Figure 5

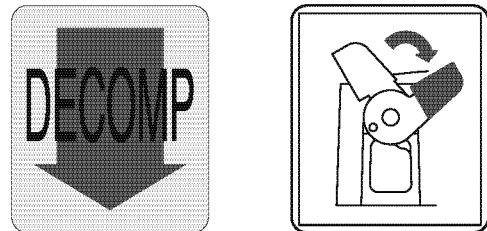


Figure 6

INDICATORS AND CONTROLS – ELECTRIC STARTER

If an L-V series engine is ordered with an electric starter it could come with a key switch and may also have indicators to monitor engine functions.

NOTICE

The illustrations and descriptions of optional equipment in this manual, such as the operator's console, are for a typical engine installation. Refer to the documentation supplied by the optional equipment manufacturer for specific operation and maintenance instructions.

PRODUCT OVERVIEW

Indicators

1 Battery

Your driven machine may have a battery indicator that comes on if there is a problem in the charging system. This indicator does not indicate whether the battery is discharged. See *TROUBLESHOOTING CHART* on page 60.

Heat

If your engine has an inlet air heater, it may have a heat indicator that lights when the inlet air heater is activated. Follow the instructions provided by the driven machine manufacturer for the operation of this indicator.

Controls

Key switch

If your engine is equipped with electric start it may have a three position key switch - OFF, ON, and START. See **Figure 7** for an illustration of a typical key switch.

NOTICE

For maximum engine life, YANMAR recommends that when shutting the engine down, you allow the engine to idle, without load, for 5 minutes. This will allow the engine components that operate at high temperatures, such as the turbocharger (if equipped) and exhaust system, to cool slightly before the engine itself is shut down.

2 OFF (key straight up and down)

When you turn the key to this position the engine shuts down. Electric current to the battery indicator and other electric devices is shut off. You can insert and remove the key in this position.

3 ON

This is the position the key will be in when the engine is running. When the engine is not running, use this position to energize the optional devices such as indicators or electric fuel pump.


NOTICE

Only hold the key in the START position for 15 seconds or the starter motor will overheat.

If the starter attempt is not successful within the 15 seconds period, allow the starter motor to cool down for at least 2 minutes before to retry.

4 START

Turn the key to this position to start the engine. As soon as the engine starts, release the key and it will automatically return to the ON position. Some key switches may be equipped with a feature that prevents you from turning the key to the START position while the engine is running. In these configurations, you cannot turn the key to the START position without first returning the key to the OFF position.

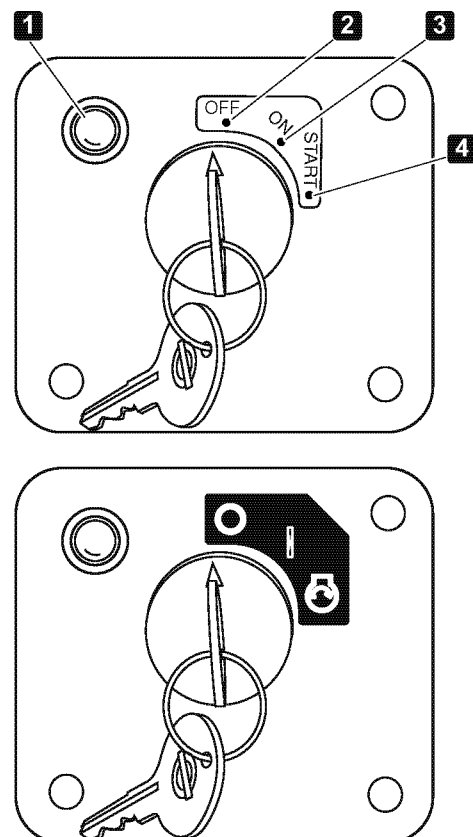

R0001549A-03X

Figure 7

Inlet Air Heater

Some engines may be equipped with an inlet air heater. Heated inlet air helps the engine to start easier in cold weather. During the engine starting sequence the inlet air heater is activated for several seconds. If the engine is equipped with an air inlet heater timer, after the heat indicator goes out, the engine can be started.

If no timer have been provided on your equipment, keep the pre-heater energized for at least 15 seconds before to attempt the start.

Engine Speed Controls

NOTICE


Never attempt to adjust the low or high idle speed limit screw. They came sealed from the factory. If the seal have been accidentally broken, bring your engine to the closer YANMAR service dealer for the check and fix.

Several types of engine speed controls are used in L-V engine applications. This illustration shows a typical example. Refer to the operating instructions for the driven machine.

The speed control lever (1, **Figure 8**) controls the engine speed. The lever could be linked to the engine speed control device.

The low idle speed limit screw (2, **Figure 8**) sets engine speed while it is idling.

The high idle speed limit screw (3, **Figure 8**) restricts the maximum engine speed when the engine is operated without a load.

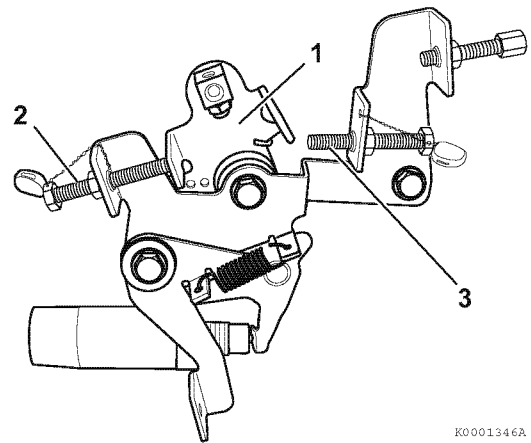

K0001346A

Figure 8

This Page Intentionally Left Blank

BEFORE YOU OPERATE

This section of the *Operation Manual* describes the diesel fuel and engine oil specifications and how to replenish them. It also describes the daily engine checkout.

DIESEL FUEL

Diesel Fuel Specifications

Diesel fuel should comply with the following specifications. The table lists several worldwide specifications for diesel fuels.

Diesel fuel specification	Location
No. 2-D, No. 1-D, ASTM D975	USA
EN590 (2009)	European Union
ISO 8217 DMX	International
BS 2869-A1 or A2	United Kingdom
JIS K2204 Grade No.2	Japan
KSM-2610	Korea
GB252	China

Additional technical fuel requirements

- The fuel cetane number should be equal to 45 or higher.
When operating the engine in cold districts or high altitudes, the higher cetane number fuel is required.
- The sulfur content must not exceed 0.5 % by volume. A higher sulfur content fuel may cause sulfuric acid corrosion in the cylinders of the engines. Less than 0.05 % is preferred. Especially in EU, the sulfur content must not exceed 10 ppm by volume.
- Use the fuel that can be used where the temperature is 12 °C (53.6 °F) lower than the expected lowest temperature to prevent the fuel from freezing.
- Bio-diesel fuels. *See Bio-diesel fuels on page 20.*
- Water and sediment in the fuel should not exceed 200 mg/kg.
- Ash content not to exceed 0.01 % by volume.
- Carbon residue content not to exceed 0.35 % by volume. Less than 0.1 % is preferred.
- Total aromatics content should not exceed 35 % by volume. Less than 30 % is preferred.
- PAH (Polycyclic Aromatic Hydrocarbons) content should be below 10 % by volume.

- Metal content of Mg, Si, and Al should be equal to or lower than 1 mass ppm. (Test analysis method JPI-5S-44-95)
- The diesel fuel should be free from Zn and Na.
- Lubricity: Wear mark of WS1.4 should be Max. 0.018 in. (460 µm) at HFRR test.

Precautions and concerns regarding the use of diesel fuel

- Never use kerosene.
- Never mix kerosene or used engine oil with the diesel fuel.
- Never use residual fuels that cause diesel fuel filter clogging and carbon deposits on the nozzles.
- Never use fuels stored for long time in a drum can or the like.
- Never keep fuel in containers with zinc plating on the inside.
- Never use fuels purchased from unauthorized dealer.
- Fuel additives are not recommended. Some fuel additives may cause poor engine performance. Consult your YANMAR representative for more information.

Bio-diesel fuels

In Europe and in the United States, as well as some other countries, non-mineral oil based fuel resources such as RME (Rapeseed Methyl Ester) and SOME (Soybean Methyl Ester), collectively known as FAME (Fatty Acid Methyl Esters), are being used as extenders for mineral oil derived diesel fuels.

YANMAR approves the use of bio-diesel fuels that do not exceed a blend of 7 % (by volume) of FAME with 93 % (by volume) of approved mineral oil derived diesel fuel. Such bio-diesel fuels are known in the marketplace as B7 diesel fuels.

These B7 diesel fuels must meet certain requirements.

- The bio-fuels must meet the minimum specifications for the country in which they are used.
 - In Europe, bio-diesel fuels must comply with the European Standard EN14214.
 - In the United States, bio-diesel fuels must comply with the American Standard ASTM D-6751.
- Bio-fuels should be purchased only from recognized and authorized diesel fuel suppliers. In North America, bio-diesel and bio-diesel blends must be purchased from the BQ-9000 accredited producers and BQ-9000 certified distributors.

Precautions and concerns regarding the use of bio-fuels:

- Free methanol in FAME may result in corrosion of aluminum and zinc FIE components.
- Free water in FAME may result in plugging of fuel filters and increased bacterial growth.
- High viscosity at low temperatures may result in fuel delivery problems, injection pump seizures, and poor injection nozzle spray atomization.
- FAME may have adverse effects on some elastomers (seal materials) and may result in fuel leakage and dilution of the engine lubricating oil.
- Even bio-diesel fuels that comply with a suitable standard as delivered, will require additional care and attention to maintain the quality of the fuel in the equipment or other fuel tanks. It is important to maintain a supply of clean, fresh fuel. Regular flushing of the fuel system, and/or fuel storage containers, may be necessary.
- The use of bio-diesel fuels that do not comply with the standards as agreed to by the diesel engine manufacturers and the diesel fuel injection equipment manufacturers, or bio-diesel fuels that have degraded as per the precautions and concerns above, may affect the warranty coverage of your engine. See *YANMAR LIMITED WARRANTY on page iii*.
- In case of doubt, call the YANMAR representative for information, collecting in advance all the useful information on the fuel subject of your inquiry.

Filling the Fuel Tank**⚠ DANGER****Fire and Explosion Hazard!**

- Diesel fuel is extremely flammable and explosive under certain conditions.

- Only fill the fuel tank with diesel fuel. Filling the fuel tank with gasoline may result in a fire.
- Never refuel with the engine running.
- Wipe up all spills immediately.
- Keep sparks, open flames or any other form of ignition (match, cigarette, static electric source) away when fueling/refueling.
- Never overfill the fuel tank.
- Fill the fuel tank and store fuel in a well-ventilated area only.
- Be sure to place the diesel fuel container on the ground when transferring the diesel fuel from the pump to the container. Hold the hose nozzle firmly against the side of the container while filling it. This prevents static electricity build-up which could cause sparks and ignite fuel vapors.
- Never place diesel fuel or other flammable material such as oil, hay or dried grass close to the engine during engine operation or shortly after shut down.
- Before you operate the engine, check for fuel leaks. Replace rubberized fuel hoses every two years or every 2000 hours of engine operation, whichever comes first, even if the engine has been out of service. Rubberized fuel lines tend to dry out and become brittle after two years or 2000 hours of engine operation, whichever comes first.
- Do not let fuel exceed the fuel level mark on the fuel filter (inlet) of the fuel tank filler port. The fuel oil may expand when the ambient temperature is high, and overflow the fuel tank cap.
- Failure to comply will result in death or serious injury.

BEFORE YOU OPERATE

NOTICE

- Only use diesel fuels recommended by YANMAR for the best engine performance, to prevent engine damage and to comply with EPA/ARB warranty requirements.
- Only use clean diesel fuel.
- Never remove inlet strainer from the filler port. If removed, dirt and debris could get into the fuel system causing it to clog.

Be sure that the fuel you are filling the tank with is having no water inside, the fuel filtration system is capable to protect the fuel equipment against solid particles entry, water can pass through the fuel filter screen and cause damages to the high pressure components.

Note that a typical fuel tank is shown. The fuel tank on your engine may be different. **Always make sure the inlet strainer remains inside of the fuel tank while fueling!**

1. Clean the area around the fuel cap (1, **Figure 1**).
2. Remove the fuel cap (1, **Figure 1**) from the fuel tank (3, **Figure 1**).
3. Stop fueling when the fuel is at the same level as the red ring (4, **Figure 1**) at the bottom of the inlet fuel screen.

CAUTION

Never supply the fuel beyond the red ring. It may bring exudation from the fuel cap.

4. Replace the fuel cap (1, **Figure 1**) and hand tighten. Over-tightening the fuel cap will damage it.

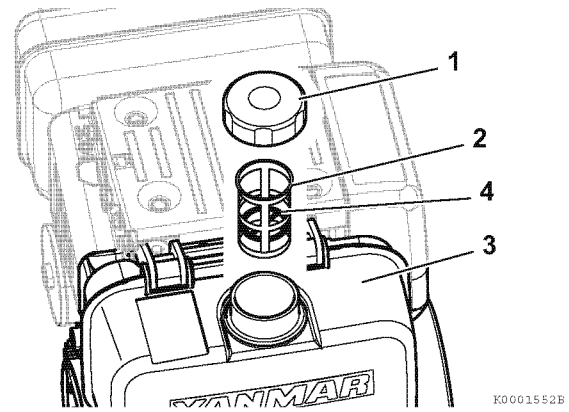


Figure 1

■ Fuel tank capacity

The following are the fuel tank capacity for various YANMAR L-V series engines.

Engine model	Fuel tank capacity (Limit value)
L48V	1.9 L
L70V	2.7 L
L100V	4.7 L

Note: Fuel tank capacity will vary depending upon which optional fuel tank is used. Refer to the operation manual provided by the driven machine manufacturer for the actual fuel tank capacity of your machine.

ENGINE OIL

NOTICE

- Only use the engine oil specified. Other engine oils may affect warranty coverage, cause internal engine components to seize, or shorten engine life.
- Prevent dirt and debris from contaminating the engine oil. Carefully clean the oil cap/dipstick and the surrounding area before you remove the cap.
- Never mix different types of engine oil. This may adversely affect the lubricating properties of the engine oil.
- Never overfill. Overfilling may result in white exhaust smoke, engine overspeed or internal damage.

Engine Oil Specifications

Use an engine oil that meets or exceeds the following guidelines and classifications:

■ Service categories

- API service categories CJ-4
- ACEA service categories E6
- JASO service category DH-2

■ Definitions

- API classification (American Petroleum Institute)
- ACEA classification (Association des Constructeurs Européens d'Automobiles)
- JASO (Japanese Automobile Standards Organization)

NOTICE


- Be sure the engine oil, engine oil storage containers, and engine oil filling equipment are free of sediments and water.
- Change the engine oil after the first 50 hours of operation and then at every 200 hours thereafter.
- Select the oil viscosity based on the ambient temperature where the engine is being operated. See SAE service grade viscosity chart (**Figure 2**).
- YANMAR does not recommend the use of engine oil "additives".

■ Additional technical engine oil requirements:

The engine oil must be changed when the Total Base Number (TBN) has been reduced to 1.0 mgKOH/g. TBN (mgKOH/g) test method; JIS K-201-5.2-2 (HCl), ASTM D4739 (HCl)

Engine Oil Viscosity

Select the appropriate engine oil viscosity based on the ambient temperature and use the SAE service grade viscosity chart in **Figure 2**.

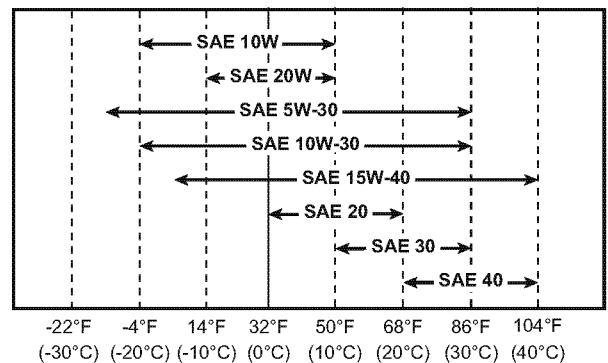

075177-00X00

Figure 2

BEFORE YOU OPERATE

Checking Engine Oil

1. Make sure engine is level.
2. Remove oil cap/dipstick (1, **Figure 3**) from either location and wipe with clean cloth.
3. Fully reinsert oil cap/dipstick **but do not screw in**.
4. Remove oil cap/dipstick. The oil level should be between upper (2, **Figure 3**) and lower (3, **Figure 3**) lines on the oil cap/dipstick.
5. Fully reinsert oil cap/dipstick (1, **Figure 3**) and hand tighten. Over-tightening the oil cap/dipstick will damage it.

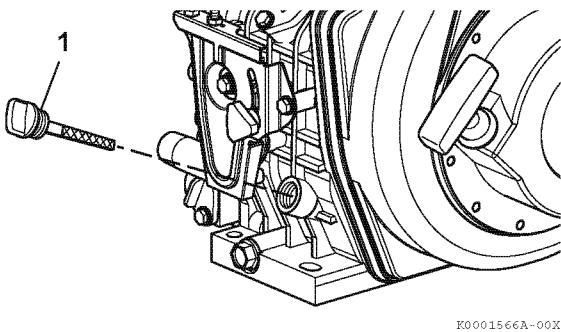
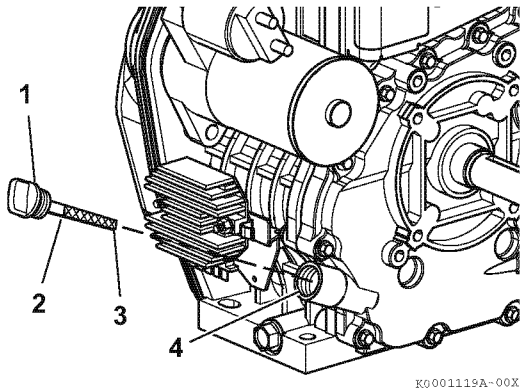


Figure 3

Adding Engine Oil

1. Make sure engine is level.
2. Remove oil cap/dipstick (1, **Figure 3**).
3. Add indicated amount of engine oil at either one of the engine oil filler ports (4, **Figure 3**).
4. Wait one minute and check oil level.
5. Add more oil if necessary.
6. Fully reinsert oil cap/dipstick (1, **Figure 3**) and hand tighten. Over-tightening the oil cap/dipstick will damage it.

Engine Oil Capacity (Typical)

The following are the engine oil capacities for various YANMAR L-V series engines.

Engine model	Dipstick upper limit/lower limit
L48V	0.85/0.58 qt (0.80/0.55 L)
L70V	1.11/0.69 qt (1.05/0.65 L)
L100V	1.7/1.06 qt (1.6/1.0 L)

Note: Oil capacity will vary depending upon which optional oil pan is used. Refer to the operation manual provided by the driven machine manufacturer for the actual engine oil capacity of your machine.

DAILY CHECKS

Before you begin any job, make sure the YANMAR L-V series engine is in good operating condition. Make sure you check the following items before you start your shift and have any repairs completed before you start work.

WARNING

High-Pressure Hazard!



- Avoid skin contact with the high pressure diesel fuel spray caused by a fuel system leak such as a broken fuel injection line. High pressure fuel can penetrate your skin and result in serious injury. If you are exposed to high pressure fuel spray, obtain prompt medical treatment.
- Never check for a fuel leak with your hands. Always use a piece of wood or cardboard. Have your authorized YANMAR industrial engine dealer or distributor repair the damage.
- Failure to comply could result in death or serious injury.

Visual Checks

1. Check for engine oil leaks.
2. Check for fuel leaks.
3. Check for damaged or missing parts.
4. Check for loose, missing, or damaged fasteners.
5. Check the electrical harnesses for cracks, abrasions, and damaged or corroded connectors.
6. Check hoses for cracks, abrasions, and damaged, loose or corroded clamps.

NOTICE

If any problem is noted during the visual check, the necessary corrective action should be taken before you operate the engine.

Check Diesel Fuel and Engine Oil

Follow the procedures in *DIESEL FUEL* on page 20 and *ENGINE OIL* on page 23 to check these levels.

Check Engine Speed Control (First Time Only)

1. Check the engine speed control for smooth operation and lubricate or clean as necessary.
2. Check engine speed control for proper adjustments.

Check Indicators

If your engine has an electric starter, check the battery indicator. Also check any other indicators supplied by the driven machine manufacturer.

Never run the machine without a battery in good condition of charge and connected properly, failing to comply will result in an electrical shock that could damage the internal circuit of the current regulator.

■ Battery

Stays on until the engine is running and the dynamo is supplying charging current. This indicator does not indicate whether the battery is discharged.

In case of remove or replacement of the battery, be sure to connect the terminal correctly, inverted polarities will result in the damage of the electrical parts of the engine/equipment.

Here is a summary of how these indicators function. The table shows what happens when you turn the key in a certain direction (e.g., OFF to ON).

Indicator	OFF to ON	START to ON
Battery	ON	OFF (Stays on until dynamo is supplying charging current. Remains on if there is a problem in the charging system. This indicator does not indicate whether the battery is discharged.)

This Page Intentionally Left Blank

ENGINE OPERATION

This section of the *Operation Manual* describes the procedures for starting the engine, checking engine performance during operation, and shutting the engine down.

STARTING THE ENGINE

Recoil Start

NOTICE

Never use an engine starting aid such as ether or any other liquids or gaseous substances to be introduced through the intake.

Use the following procedure to start the engine.

■ Daily checks

1. Make sure you follow the procedures stated in *DAILY CHECKS* on page 25.
2. Make sure the fuel cock is in the ON position (1, Figure 1).

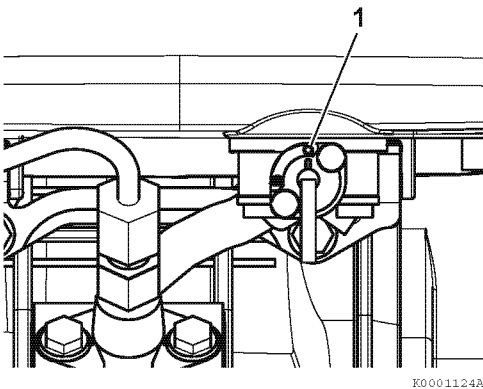


Figure 1

■ Set engine speed control to START

Several types of engine speed controls are used in L-V engine applications. The following procedures are for three typical applications. Refer to the operating instructions for the driven machine.

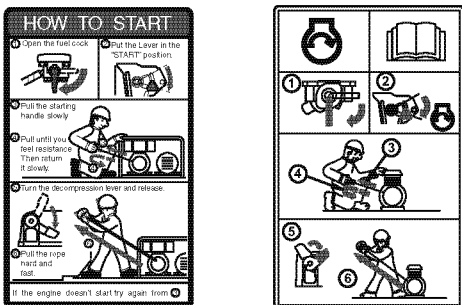


Figure 2

1. If your engine speed control is similar to **Figure 3** slide the engine speed control lever (1, **Figure 3**) to the RUN position (2, **Figure 3**).

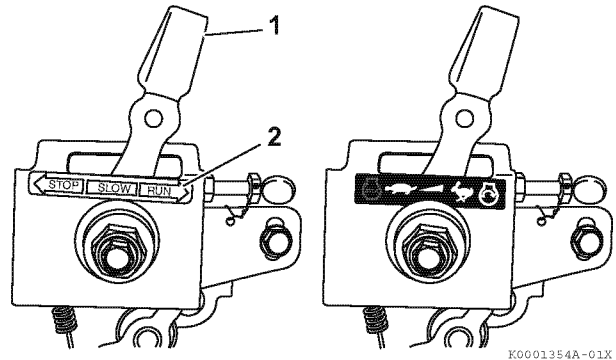


Figure 3

2. If your engine speed control is similar to **Figure 4** slide the engine speed control lever (1, **Figure 4**) to the RUN position (2, **Figure 4**).

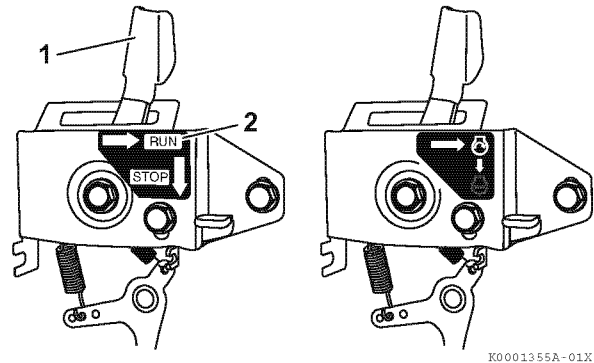


Figure 4

3. If your engine speed control is similar to **Figure 5**:
 - 1- Turn the engine speed control knob (1, **Figure 5**) to the left (2, **Figure 5**).
 - 2- Slide the engine speed control knob to the START position (3, **Figure 5**).
 - 3- Turn the engine speed control knob to the right (4, **Figure 5**) to tighten it.

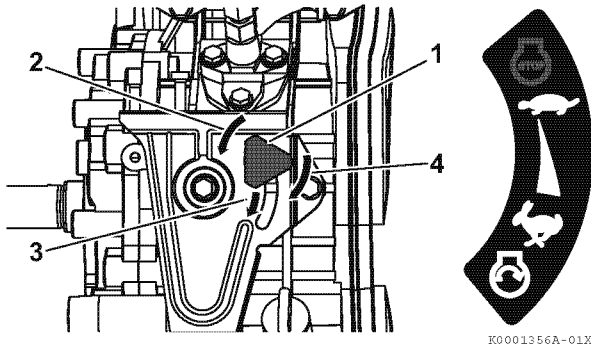


Figure 5

Start the engine

NOTICE

Tips while starting engine with recoil starter:

- Pulling out the recoil starter handle too hard or fast will damage the equipment.
- Always pull recoil starter handle all the way out or the engine will not start.
- Never allow the recoil starter handle to snap back against the engine. Return the handle to the starting position gently to prevent damage to the recoil starter.
- Never use an engine starting aid such as ether. Engine damage will result.

Engine with manual decompression device

This engine is equipped with a decompression lever (1, Figure 7).

1. Grasp the recoil starter handle (1, Figure 6).
2. Pull the handle out slowly until you feel strong resistance.
3. Slowly return the recoil starter handle to the initial position.
4. Push the decompression lever (1, Figure 7) down and release it. The decompression lever will automatically return to the original position when the engine starts.

Note: Always do this decompression process first before starting with a recoil starter.

5. Grasp the recoil starter handle (1, Figure 6).
6. Pull the handle all the way out with a strong and even motion. Use two hands if necessary.
7. Slowly return the recoil starter handle to the initial position.
8. If the engine does not start, repeat the *Start The Engine* procedure from Step 1.

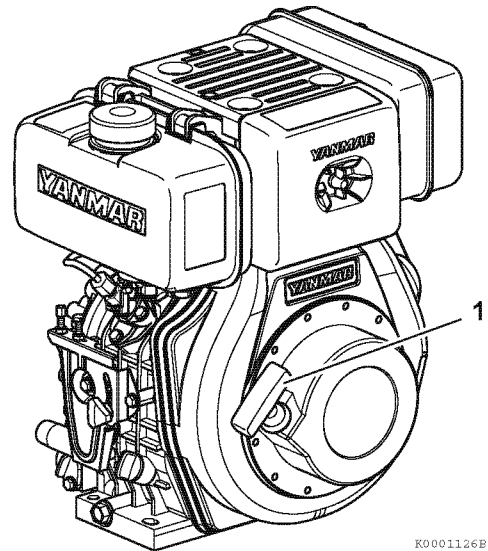


Figure 6

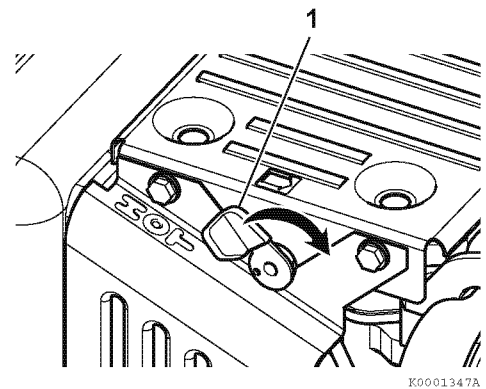


Figure 7

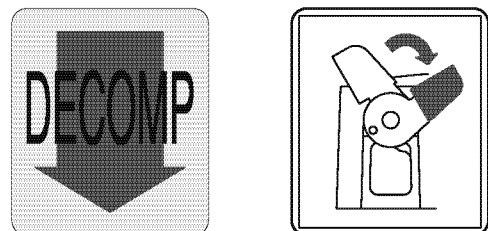


Figure 8

ENGINE OPERATION

Engine with auto-decompression device

Some L-V model engines are equipped with an automatic, internal compression release mechanism and do not have the decompression lever (1, **Figure 7**). In this case, follow the procedure below.

1. Grasp the recoil starter handle (1, **Figure 6**).
2. Pull the handle all the way out with a strong and even motion. Use two hands if necessary.
3. Slowly return the recoil starter handle to the initial position.
4. If the engine does not start, repeat the procedure from Step 1.

■ In cold weather - L48V only

If you have trouble pulling the recoil handle on an L48V engine in cold weather follow this procedure:

1. Remove the oil plug (1, **Figure 9**).

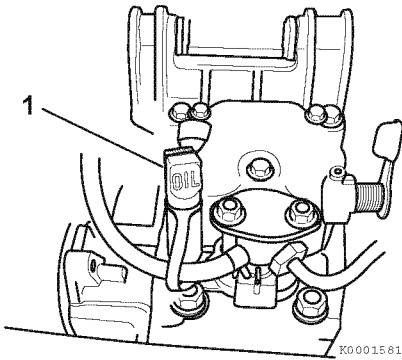


Figure 9

2. Add 2 cc of engine oil to the oil port (1, **Figure 10**).

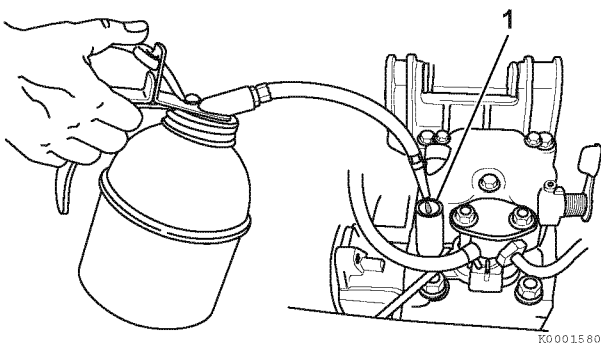


Figure 10

3. Reinsert the oil plug (1, **Figure 9**).

Electric Start

Use the following procedure to start the engine.

■ Daily checks

1. Make sure you follow the procedures stated in *DAILY CHECKS* on page 25.
2. Make sure the fuel cock is in the ON position (1, **Figure 11**).

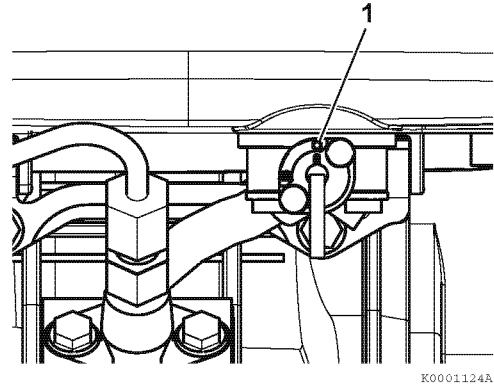


Figure 11

■ Set engine speed control to START

Several types of engine speed controls are used in L-V engine applications. The following procedures are for three typical applications. Refer to the operating instructions for the driven machine.

1. If your engine speed control is similar to **Figure 12** slide the engine speed control lever (1, **Figure 12**) to the RUN position (2, **Figure 12**).

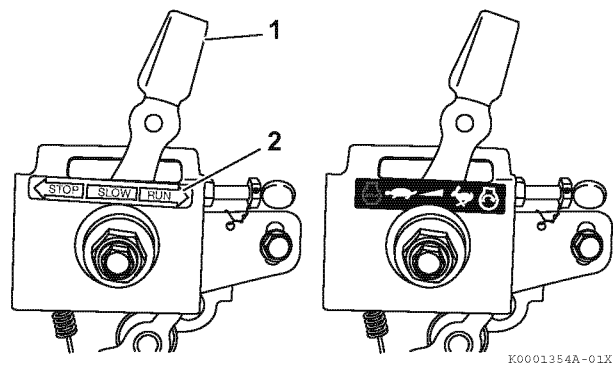


Figure 12

- If your engine speed control is similar to **Figure 13** slide the engine speed control lever (1, **Figure 13**) to the RUN position or (2, **Figure 13**).

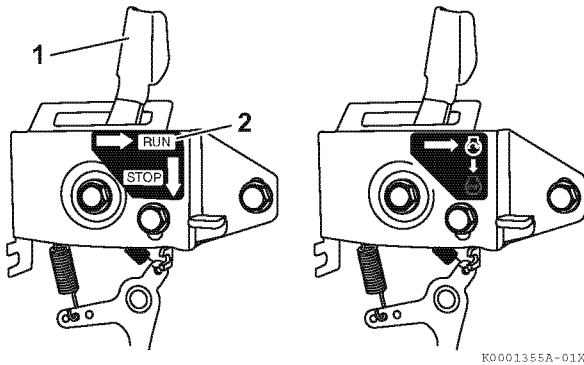


Figure 13

- If your engine speed control is similar to **Figure 14**:
 - Turn the engine speed control knob (1, **Figure 14**) to the left (2, **Figure 14**).
 - Slide the engine speed control knob to the START position (3, **Figure 14**).
 - Turn the engine speed control knob to the right (4, **Figure 14**) to tighten it.

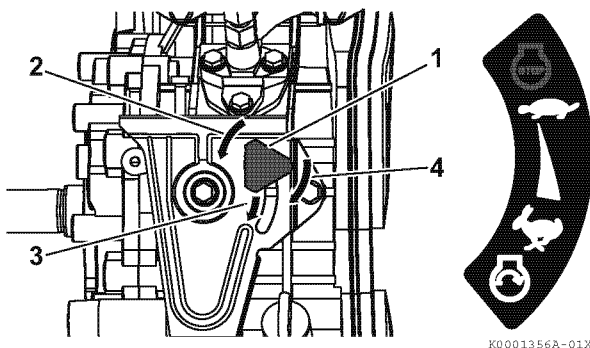


Figure 14

■ Start the engine

Use the following procedure to start the engine.

- Insert the key into the key switch.

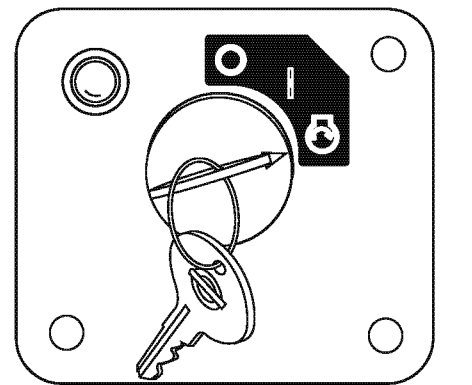
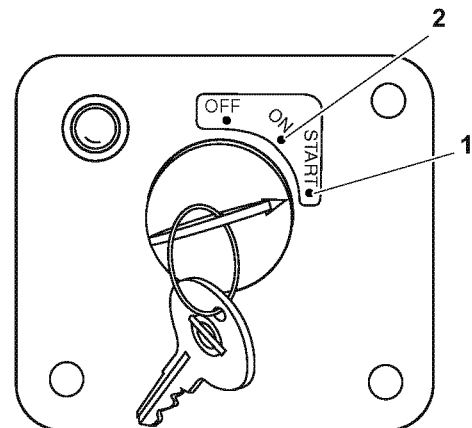


Figure 15

- Turn the key clockwise to the START position (1, **Figure 15**). Release the key as soon as the engine starts. It will return to the ON position (2, **Figure 15**).
- If the engine fails to start:
 - Wait until the engine comes to a complete stop before you attempt to start it again. Engaging the starter while the engine is still rotating will result in damage to the starter motor and flywheel.
 - Wait at least 2 minutes before you attempt to start the engine again. This pause will allow the battery voltage to recover to prevent damage to the starter motor due to the low battery voltage.

NOTICE

Never hold the key in the START position for longer than 15 seconds.

CHECK THE ENGINE DURING OPERATION

NOTICE

Make sure the engine is installed on a level surface. If a continuously running engine is installed at an angle greater than 20° (in any direction) or if an engine runs for short periods of time (less than 3 minutes) at an angle greater than 30° in any direction. This may cause serious engine damage.

New engine break in:

- On the initial engine start-up, allow the engine to idle for approximately 15 minutes while you check for proper engine oil pressure, diesel fuel leaks, engine oil leaks, coolant leaks, and for proper operation of the indicators and/or gauges.
- During the first hour of operation, vary the engine speed and the load on the engine. Short periods of maximum engine speed and load are desirable. Avoid prolonged operation at minimum or maximum engine speeds and loads for the next 4 to 5 hours.
- During the break-in period, carefully observe the engine oil pressure and engine temperature.
- During the break-in period, check the engine oil and coolant levels frequently.

NOTICE

Never engage the starter motor while the engine is running. This may damage the starter motor pinion and/or ring gear.

⚠ WARNING

High-Pressure Hazard!



- Avoid skin contact with the high pressure diesel fuel spray caused by a fuel system leak such as a broken fuel injection line. High pressure fuel can penetrate your skin and result in serious injury. If you are exposed to high pressure fuel spray, obtain prompt medical treatment.
- Never check for a fuel leak with your hands. Always use a piece of wood or cardboard. Have your authorized YANMAR industrial engine dealer or distributor repair the damage.
- Failure to comply could result in death or serious injury.

1. After the engine has reached operating temperature, all of the indicators (if equipped) should be off. If any of the indicators are on, shut down the engine and have the necessary repairs performed.
2. Check for any fuel or engine oil leaks. If any leaks are found shut down the engine and have the necessary repairs performed.
3. Check for abnormal sounds or vibration. In some applications the engine and its mounting may start to resonate and cause unusual vibrations at certain engine speeds. Avoid running the engine at these speeds. If the abnormal sounds or vibration cannot be resolved, shut down the engine and have the necessary repairs performed.
4. Check for white or black smoke from the exhaust system. A small amount of white exhaust smoke is normal on start-up of a cold engine. Black exhaust smoke could mean the engine is overloaded or being over-fueled. If either of these conditions persists, contact your authorized YANMAR industrial engine dealer or distributor.
5. Check the fuel level during operation. If the fuel level runs low, stop the engine and refuel.

ADJUST ENGINE SPEED

NOTICE

New engine break in:

- On the initial engine start-up, allow the engine to idle for approximately 15 minutes while you check for proper engine oil pressure, diesel fuel leaks, engine oil leaks, coolant leaks, and for proper operation of the indicators and/or gauges.
- During the first hour of operation, vary the engine speed and the load on the engine. Short periods of maximum engine speed and load are desirable. Avoid prolonged operation at minimum or maximum engine speeds and loads for the next 4 to 5 hours.
- During the break-in period, carefully observe the engine oil pressure and engine temperature.
- During the break-in period, check the engine oil and coolant levels frequently.

Use the engine speed control to adjust the engine speed for the task that will be performed.

Several types of engine speed controls are used in L-V engine applications. The following procedures are for three typical applications. Refer to the operating instructions for the driven machine.

1. If your engine speed control is similar to **Figure 16** slide the engine speed control lever (1, **Figure 16**) in the direction shown to adjust the engine speed.

Note: This is a friction adjustment. If the speed control will not maintain a given speed, tightening the nut will increase the friction on the speed control lever.

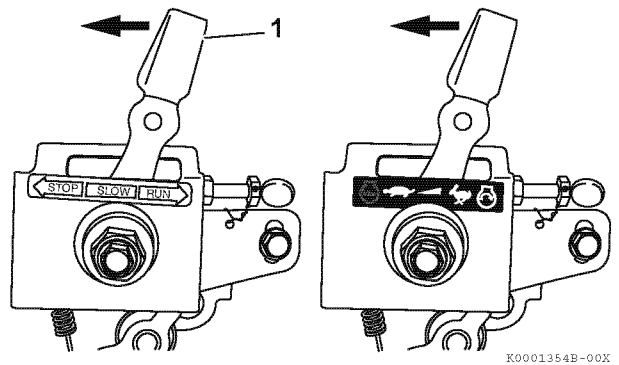


Figure 16

2. If your engine speed control is similar to **Figure 17** slide the engine speed control lever (1, **Figure 17**) in the direction shown to adjust the engine speed.

Note: This type of speed control, typically used on a generator set, has only one speed setting. When you move the lever to the right, it clicks into the RUN position. The speed control lever is spring-loaded so when you push down on the STOP button, the speed control lever moves back to the shut-off position. There is no idle position or intermediate speeds.

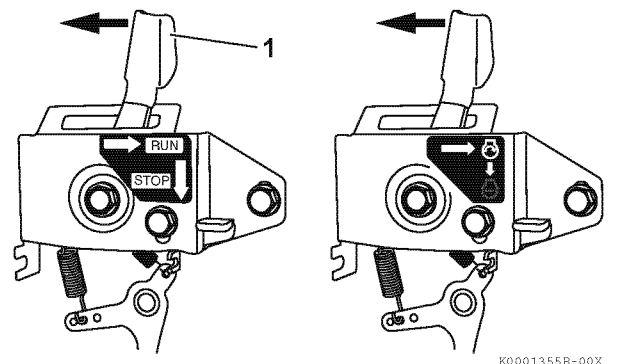


Figure 17

ENGINE OPERATION

3. If your engine speed control is similar to **Figure 18**:
 - 1- Turn the engine speed control knob (1, **Figure 18**) to the left (2, **Figure 18**).
 - 2- Slide the engine speed control knob in the direction shown to adjust the engine speed.
 - 3- Turn the engine speed control knob to the right (3, **Figure 18**) to tighten it.

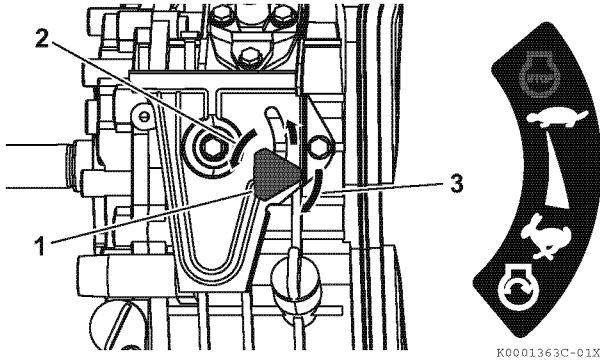


Figure 18

SHUTTING DOWN THE ENGINE

⚠ WARNING

Cautions when Stopping the Engine!



- Do not suddenly accelerate from a low-speed state which was right before stopping. The engine may rarely rotate reversely.
- If the reversing occurs, white smoke blows out from the air cleaner. In that case, immediately stop the engine, and inspect the air cleaner. If you find anything wrong, replace the parts.

NOTICE

For maximum engine life, YANMAR recommends that when shutting the engine down, you allow the engine to idle, without load, for 5 minutes. This will allow the engine components that operate at high temperatures, such as the turbocharger (if equipped) and exhaust system, to cool slightly before the engine itself is shut down.

Preparing to Stop Engine

Follow these steps to shut down the engine:

1. Disengage the PTO.
2. Set the engine speed control to its lowest setting.
3. Run the engine at low idle speed or run without load for at least five minutes before you shut it down.

Set Engine Speed Control to STOP

NOTICE

If the engine continues to run after you position the engine speed control to the STOP position, turn the fuel cock to the CLOSED position.

Several types of engine speed controls are used in L-V engine applications. The following procedures are for three typical applications. Refer to the operating instructions for the driven machine.

1. If your engine speed control is similar to **Figure 19** slide the engine speed control lever (1, **Figure 19**) to the STOP position (2, **Figure 19**).

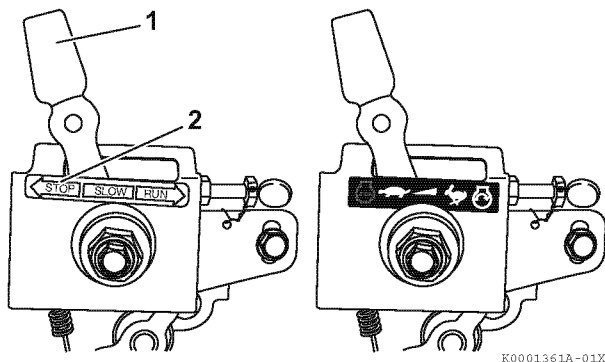


Figure 19

2. If your engine speed control is similar to **Figure 20** press the STOP button (1, **Figure 20**) and the engine speed control lever (2, **Figure 20**) will automatically return to the STOP position.

Note: The speed control lever is spring-loaded so when you push down on the STOP button, the speed control lever moves back to the shut-off position. There is no idle position or intermediate speeds.

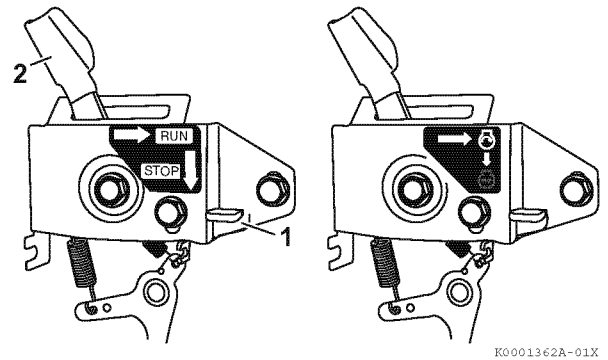


Figure 20

3. If your engine speed control is similar to **Figure 21**:
 - 1- Turn the engine speed control knob (1, **Figure 21**) to the left (2, **Figure 21**).
 - 2- Slide the engine speed control knob to the STOP position (3, **Figure 21**).
 - 3- Turn the engine speed control knob to the right (4, **Figure 21**) to tighten it.

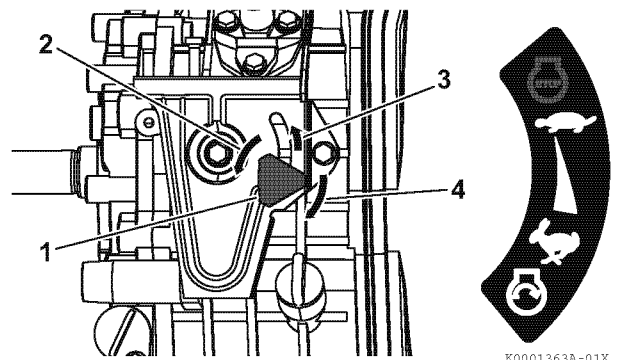


Figure 21

ENGINE OPERATION

Electric Start Models

Turn the key to the OFF position (1, **Figure 22**) and remove it from the key switch.

Some equipment could be provided with an electric fuel cut valve, if this is your version, the shut down of the engine is done returning the key in the stop position, check the equipment manufacture manuals for more details.

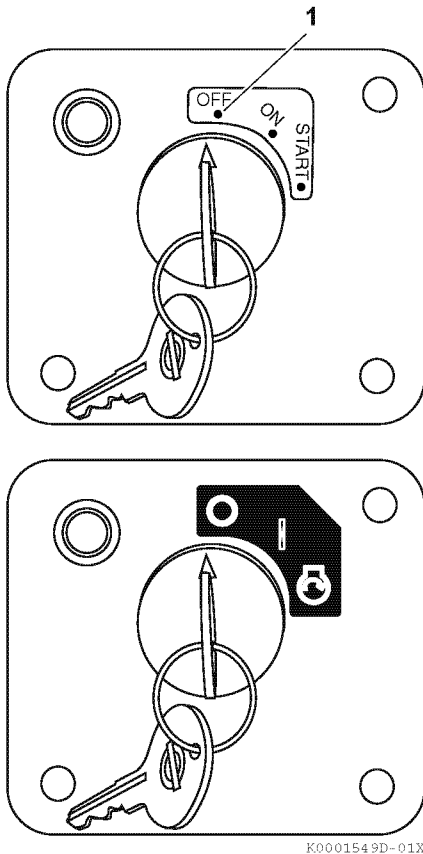


Figure 22

After the Engine Stops

1. Move the fuel cock lever to the closed position (1, **Figure 23**).

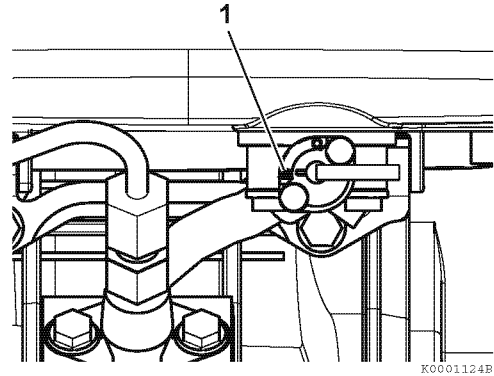


Figure 23

2. Slowly pull the recoil starter handle out to the point of resistance (the point in the compression stroke where the intake and exhaust valves are closed). This helps to prevent rust while the engine is not in use.
3. If the engine will not be used for six months or longer, follow the additional instructions in *LONG TERM STORAGE* on page 63.

PERIODIC MAINTENANCE

This section of the *Operation Manual* describes the procedures for proper care and maintenance of the engine.

PRECAUTIONS

The Importance of Periodic Maintenance

Engine deterioration and wear occurs in proportion to length of time the engine has been in service and the conditions the engine is subject to during operation. Periodic maintenance prevents unexpected downtime, reduces the number of accidents due to poor machine performance and helps extend the life of the engine.

Performing Periodic Maintenance

WARNING

Exhaust Hazard!



- **Never operate the engine in an enclosed area such as a garage, tunnel, underground room, manhole or ship's hold without proper ventilation.**
- **Never block windows, vents, or other means of ventilation if the engine is operating in an enclosed area. All internal combustion engines create carbon monoxide gas during operation. Accumulation of this gas within an enclosure could cause illness or even death.**
- **Make sure that all connections are tightened to specifications after repair is made to the exhaust system.**
- **Failure to comply could result in death or serious injury.**

Perform periodic maintenance procedures in an open, level area free from traffic. If possible, perform the procedures indoors to prevent environmental conditions, such as rain, wind, or snow, from damaging the machine.

The Importance of Daily Checks

Periodic Maintenance Schedules assume that the daily checks are performed on a regular basis. Make it a habit of performing daily checks before the start of each shift. *See DAILY CHECKS on page 25.*

Keep a Log of Engine Hours and Daily Checks

Keep a log of the number of hours the engine is run each day and a log of the daily checks performed. Also note the date, type of repair (e.g., replaced alternator), and parts needed for any service needed between the periodic maintenance intervals. Periodic maintenance intervals are every 50, 200, 400, 1000, 1500 and 2000 engine hours. Failure to perform periodic maintenance will shorten the life of the engine.

YANMAR Replacement Parts

YANMAR recommends that you use genuine YANMAR parts when replacement parts are needed. Genuine replacement parts help ensure long engine life.

Tools Required

Before you start any periodic maintenance procedure make sure you have the tools you need to perform all of the required tasks.

Ask Your Authorized YANMAR Industrial Engine Dealer or Distributor for Help

Our professional service technicians have the expertise and skills to help you with any maintenance or service related procedures you need help with.

Required EU Regulation Maintenance

To maintain optimum engine performance and compliance with the EU regulation, it is essential that you follow the *PERIODIC MAINTENANCE SCHEDULE* on page 40 and *PERIODIC MAINTENANCE PROCEDURES* on page 42.

EU Regulation Installation Requirements

The following are the installation requirements for the EU regulation. Unless these requirements are met, the exhaust gas emissions will not be within the limits specified by the EU regulation.

Maximum Exhaust Gas Restriction shall be:

L48V	0.53 psi (3.628 kPa; 370 mmAq) or less
L70V	0.54 psi (3.727 kPa; 380 mmAq) or less
L100	0.63 psi (4.315 kPa; 440 mmAq) or less

Maximum exhaust gas restriction shall be:

L48V	0.10 psi (0.69 kPa; 70 mmAq) or less
L70V	0.20 psi (1.37 kPa; 140 mmAq) or less
L100	0.21 psi (1.47 kPa; 150 mmAq) or less

Clean or replace the air cleaner element if the air intake restriction exceeds the above mentioned value.

Tightening Fasteners

Use the correct amount of torque when you tighten fasteners on the machine. Applying excessive torque may damage the fastener or component and not enough torque may cause a leak or component failure.

If you are unsure about the correct torque for an unspecified component, please contact the YANMAR representative for instructions.

NOTICE

The tightening torque in the *STANDARD TORQUE CHART* on page 39 should be carefully observed.

- Apply 60 % torque to bolts that are not listed.
- Apply 80 % torque when tightened to aluminum alloy.

STANDARD TORQUE CHART

Thread size x pitch	mm	M6 x 1.0	M8 x 1.25	M10 x 1.5	M12 x 1.75	M14 x 1.5	M16 x 1.5
Tightening torque	in. lbs	96.0 ± 9.0	–	–	–	–	–
	ft lbs	–	19.0 ± 2.0	36.0 ± 4.0	65.0 ± 7.0	101.0 ± 7.0	167.0 ± 7.0
	N·m	10.8 ± 1.0	25.5 ± 2.9	49.0 ± 4.9	88.3 ± 9.8	137.0 ± 9.8	226.0 ± 9.8
	kgf·m	1.1 ± 0.1	2.6 ± 0.3	5.0 ± 0.5	9.0 ± 1.0	14.0 ± 1.5	23.0 ± 2.0

PERIODIC MAINTENANCE

PERIODIC MAINTENANCE SCHEDULE

Daily and periodic maintenance is important to keep the engine in good operating condition. The following is a summary of maintenance items by periodic maintenance intervals. Periodic maintenance intervals vary depending on engine application, loads, diesel fuel and engine oil used and are hard to establish definitively. The following should be treated only as a general guideline.

NOTICE

Establish a periodic maintenance plan according to the engine application and make sure you perform the required periodic maintenance at intervals indicated. Failure to follow these guidelines will impair the engine's safety and performance characteristics, shorten the engine's life and may affect the warranty coverage on your engine. See *YANMAR LIMITED WARRANTY on page iii*.

Consult your authorized YANMAR industrial engine dealer or distributor for assistance when checking items marked with a ●.

Periodic Maintenance Chart

○: Check ◇: Replace ●: Contact your authorized YANMAR industrial engine dealer or distributor for these maintenance services

System	Check item	Daily	Periodic maintenance interval					
			Every 50 hours	Every 200 hours	Every 400 hours	Every 1000 hours	Every 1500 hours	Every 2000 hours
Air intake	Clean or replace air cleaner element - may need more frequent service in dusty conditions			○ 100 hours	◇ 500 hours			
Cylinder head	Adjust intake/exhaust valve clearance				●			
	Check compression					●		
Electrical equipment	Check battery and add water as necessary	○ Before operation						
	Check battery indicator (if equipped) and other driven machine indicators (if equipped)	○ When engine is started						
Emission control warranty	Inspect, clean and test fuel injection nozzle						●	
	Inspect, any seriously damages or not in appearance of the muffler (DOC) (EU regulation certified L48V only)							● Every 3000 hours *1

*1: If you find any damage or dent, contact your authorized YANMAR industrial engine dealer or distributor

PERIODIC MAINTENANCE

○: Check ◇: Replace ●: Contact your authorized YANMAR industrial engine dealer or distributor for these maintenance services

System	Check item	Daily	Periodic maintenance interval					
			Every 50 hours	Every 200 hours	Every 400 hours	Every 1000 hours	Every 1500 hours	Every 2000 hours
Engine oil	Check engine oil level and add engine oil as necessary	○ Before operation						
	Drain and refill engine oil			◇ 2nd and after				
	Clean, check or replace engine oil filter - replace if damaged May need more frequent service in dusty conditions		◇ 1st time	○	◇ 2nd and after			
	Check for engine oil leakage	○ Before and after operation						
Enginespeed control	Check for proper operation Verify adjustment	○ 1st time only		○ 2nd and after				
Exhaust system	Check spark arrestor for clogging	○ Before operation						
Fuel	Check fuel tank level and add fuel as necessary	○ Before operation						
	Drain and clean fuel tank			○				
	Clean inlet fuel screen		○					
	Replace outlet fuel filter				◇			
	Check for fuel leakage	○ Before and after operation						
Hoses	Replace fuel system hose(s)							● or every 2 yrs. whichever comes first

PERIODIC MAINTENANCE PROCEDURES

Daily, Before Operation

Perform the following maintenance daily before operation.

- Check battery (if equipped)
- Check battery indicator (if equipped)
- Check engine oil level
- Check for engine oil leakage
- Check engine speed control (1st time only)
- Check spark arrestor (if equipped)
- Check fuel level
- Check for fuel leakage

■ Check battery (if equipped)

⚠ DANGER

Explosion Hazard!



- Never check the remaining battery charge by shorting out the terminals. This will result in a spark and may cause an explosion or fire. Use a hydrometer to check the remaining battery charge.
 - If the electrolyte is frozen, slowly warm the battery before you recharge it.
 - Failure to comply will result in death or serious injury.
-
- Electric parts will be damaged if operating without a battery in good condition and properly connected.


⚠ WARNING

Burn Hazard!



- Batteries contain sulfuric acid. Never allow battery fluid to come in contact with clothing, skin or eyes. Severe burns could result.
- Always wear safety goggles and protective clothing when servicing the battery. If contact with the skin and/or eyes should occur, flush with a large amount of water and obtain prompt medical treatment.
- Failure to comply could result in death or serious injury.

NOTICE

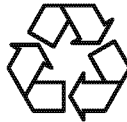

- Be environmentally responsible. Follow these procedures for hazardous waste disposal. Failure to follow these procedures may seriously harm the environment.
- Follow the guidelines of the EPA or other governmental agency for the proper disposal of hazardous materials such as engine oil, diesel fuel and engine coolant. Consult the local authorities or reclamation facility.
- Never dispose of hazardous materials irresponsibly by dumping them into a sewer, on the ground or into ground water or waterways.

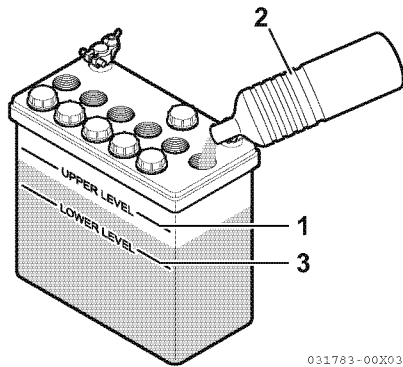


Figure 1

- When the amount of fluid nears the lower limit (3, **Figure 1**), fill with distilled water (2, **Figure 1**) so it is at the upper limit (1, **Figure 1**). If operation continues with insufficient battery fluid, the battery life is shortened, and the battery may overheat and explode. During the summer, check the fluid level more often than specified.
- If the engine cranking speed is so slow that the engine does not start, recharge the battery.
- If the engine still will not start after charging, have your authorized YANMAR industrial engine dealer or distributor check the battery and the engine's starting system.

If operating the machine where the ambient temperature could drop to 14 °F (-10 °C) or less, remove the battery from the machine at the end of the day. Store the battery in a warm place until the next use. This will help start the engine easily at low ambient temperatures.


■ **Check battery indicator (if equipped)**

Visually check the battery indicator (if equipped) and any other indicator provided by the driven machine manufacturer. See *INDICATORS AND CONTROLS – ELECTRIC STARTER* on page 15.

■ **Check engine oil level**

NOTICE

- Only use the engine oil specified. Other engine oils may affect warranty coverage, cause internal engine components to seize, or shorten engine life.
- Prevent dirt and debris from contaminating the engine oil. Carefully clean the oil cap/dipstick and the surrounding area before you remove the cap.
- Never mix different types of engine oil. This may adversely affect the lubricating properties of the engine oil.
- Never overfill. Overfilling may result in white exhaust smoke, engine overspeed or internal damage.

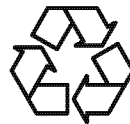

- Be environmentally responsible. Follow these procedures for hazardous waste disposal. Failure to follow these procedures may seriously harm the environment.
- Follow the guidelines of the governmental agency for the proper disposal of hazardous materials such as engine oil, diesel fuel and engine coolant. Consult the local authorities or reclamation facility.
- Never dispose of hazardous materials irresponsibly by dumping them into a sewer, on the ground or into ground water or waterways.

Before you operate the engine check the engine oil level. See *Checking Engine Oil* on page 24.

PERIODIC MAINTENANCE

■ Check for engine oil leakage

⚠ WARNING

Burn Hazard!



- Keep your hands and other body parts away from hot engine surfaces such as the muffler, exhaust pipe, turbocharger (if equipped) and engine block during operation and shortly after you shut the engine down. These surfaces are extremely hot while the engine is operating and could seriously burn you.

- Failure to comply could result in death or serious injury.

Before you operate the engine check for any engine oil leaks. If you discover an engine oil leak see your authorized YANMAR industrial engine dealer or distributor to repair the engine.

■ Check engine speed control (1st time only)

Before you operate the driven machine for the first time check the engine speed control. See the instructions for your driven machine for proper adjustments.

1. Check the engine speed control for smooth operation and lubricate or clean as necessary.
2. Check engine speed control for proper adjustments.

■ Check spark arrestor (if equipped)

⚠ WARNING

Burn Hazard!




- Keep your hands and other body parts away from hot engine surfaces such as the muffler, exhaust pipe, turbocharger (if equipped) and engine block during operation and shortly after you shut the engine down. These surfaces are extremely hot while the engine is operating and could seriously burn you.

- Failure to comply could result in death or serious injury.

A clogged spark arrestor hinders exhaust gas flow which reduces engine output, increases fuel consumption, and makes starting difficult. Clean the spark arrestor regularly.

Clean the spark arrestor (1, **Figure 2**) as follows:

1. Remove the locknut (2, **Figure 2**), end cap (3, **Figure 2**) and diffuser discs (4, **Figure 2**) from the spark arrestor.

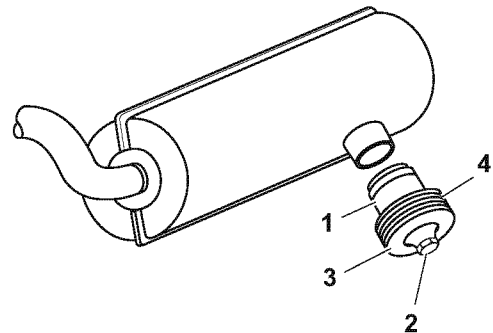

K0001567A-00X

Figure 2

2. Clean any carbon deposits from the spark arrestor.
3. Install the diffuser discs (4, **Figure 2**) and end cap (3, **Figure 2**) on the spark arrestor (1, **Figure 2**) and secure with the locknut (2, **Figure 2**).

■ Check fuel level

⚠ DANGER

Fire and Explosion Hazard!



- Diesel fuel is extremely flammable and explosive under certain conditions.

- Only fill the fuel tank with diesel fuel. Filling the fuel tank with gasoline may result in a fire.
- Never refuel with the engine running.
- Wipe up all spills immediately.
- Keep sparks, open flames or any other form of ignition (match, cigarette, static electric source) away when fueling/refueling.
- Never overfill the fuel tank.
- Fill the fuel tank and store fuel in a well-ventilated area only.
- Be sure to place the diesel fuel container on the ground when transferring the diesel fuel from the pump to the container. Hold the hose nozzle firmly against the side of the container while filling it. This prevents static electricity build-up which could cause sparks and ignite fuel vapors.
- Never place diesel fuel or other flammable material such as oil, hay or dried grass close to the engine during engine operation or shortly after shut down.
- Before you operate the engine, check for fuel leaks. Replace rubberized fuel hoses every two years or every 2000 hours of engine operation, whichever comes first, even if the engine has been out of service. Rubberized fuel lines tend to dry out and become brittle after two years or 2000 hours of engine operation, whichever comes first.
- Do not let fuel exceed the fuel level mark on the fuel filter (inlet) of the fuel tank filler port. The fuel oil may expand when the ambient temperature is high, and overflow the fuel tank cap.
- Failure to comply will result in death or serious injury.

NOTICE

- Only use diesel fuels recommended by YANMAR for the best engine performance, to prevent engine damage and to comply with EPA/ARB warranty requirements.
- Only use clean diesel fuel.
- Never remove inlet fuel screen from the filler port. If removed, dirt and debris could get into the fuel system causing it to clog.

Before you operate the engine check the fuel level. See *Filling the Fuel Tank* on page 21.

■ Check for fuel leakage

⚠ WARNING

High-Pressure Hazard!



- Avoid skin contact with the high pressure diesel fuel spray caused by a fuel system leak such as a broken fuel injection line. High pressure fuel can penetrate your skin and result in serious injury. If you are exposed to high pressure fuel spray, obtain prompt medical treatment.
- Never check for a fuel leak with your hands. Always use a piece of wood or cardboard. Have your authorized YANMAR industrial engine dealer or distributor repair the damage.
- Failure to comply could result in death or serious injury.

WARNING

Burn Hazard!



- Keep your hands and other body parts away from hot engine surfaces such as the muffler, exhaust pipe, turbocharger (if equipped) and engine block during operation and shortly after you shut the engine down. These surfaces are extremely hot while the engine is operating and could seriously burn you.
- Failure to comply could result in death or serious injury.

NOTICE



- Be environmentally responsible. Follow these procedures for hazardous waste disposal. Failure to follow these procedures may seriously harm the environment.
- Follow the guidelines of the EPA or other governmental agency for the proper disposal of hazardous materials such as engine oil, diesel fuel and engine coolant. Consult the local authorities or reclamation facility.
- Never dispose of hazardous materials irresponsibly by dumping them into a sewer, on the ground or into ground water or waterways.

Before you operate the engine check for any fuel leaks. Never use your hands! If you discover a fuel leak see your authorized YANMAR industrial engine dealer or distributor to repair the engine.

Daily, After Operation

- Check for engine oil leakage
- Check for fuel leakage
- Check for engine oil leakage

WARNING

Burn Hazard!



- Keep your hands and other body parts away from hot engine surfaces such as the muffler, exhaust pipe, turbocharger (if equipped) and engine block during operation and shortly after you shut the engine down. These surfaces are extremely hot while the engine is operating and could seriously burn you.
- Failure to comply could result in death or serious injury.

After you shut down the engine check for any engine oil leaks. If you discover an engine oil leak see your authorized YANMAR industrial engine dealer or distributor to repair the engine.

■ Check for fuel leakage

⚠ WARNING

High-Pressure Hazard!



- Avoid skin contact with the high pressure diesel fuel spray caused by a fuel system leak such as a broken fuel injection line. High pressure fuel can penetrate your skin and result in serious injury. If you are exposed to high pressure fuel spray, obtain prompt medical treatment.

- Never check for a fuel leak with your hands. Always use a piece of wood or cardboard. Have your authorized YANMAR industrial engine dealer or distributor repair the damage.
- Failure to comply could result in death or serious injury.

⚠ WARNING


Burn Hazard!



- Keep your hands and other body parts away from hot engine surfaces such as the muffler, exhaust pipe, turbocharger (if equipped) and engine block during operation and shortly after you shut the engine down. These surfaces are extremely hot while the engine is operating and could seriously burn you.

- Failure to comply could result in death or serious injury.

NOTICE

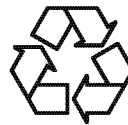

- Be environmentally responsible. Follow these procedures for hazardous waste disposal. Failure to follow these procedures may seriously harm the environment.
- Follow the guidelines of the EPA or other governmental agency for the proper disposal of hazardous materials such as engine oil, diesel fuel and engine coolant. Consult the local authorities or reclamation facility.
- Never dispose of hazardous materials irresponsibly by dumping them into a sewer, on the ground or into ground water or waterways.

After you shut down the engine check for any fuel leaks. Never use your hands! If you discover a fuel leak see your authorized YANMAR industrial engine dealer or distributor to repair the engine.

After Initial 50 Hours of Operation

Perform the following maintenance after the initial 50 hours of operation.

- Replace engine oil
- Replace engine oil filter

■ Replace engine oil

WARNING


Burn Hazard!



- If you must drain the engine oil while it is still hot, stay clear of the hot engine oil to avoid being scalded. Make sure you wear eye protection.

- Failure to comply could result in death or serious injury.

NOTICE

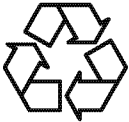

- Be environmentally responsible. Follow these procedures for hazardous waste disposal. Failure to follow these procedures may seriously harm the environment.

- Follow the guidelines of the EPA or other governmental agency for the proper disposal of hazardous materials such as engine oil, diesel fuel and engine coolant. Consult the local authorities or reclamation facility.
- Never dispose of hazardous materials irresponsibly by dumping them into a sewer, on the ground or into ground water or waterways.

NOTICE

- Only use the engine oil specified. Other engine oils may affect warranty coverage, cause internal engine components to seize, or shorten engine life.
- Prevent dirt and debris from contaminating the engine oil. Carefully clean the oil cap/dipstick and the surrounding area before you remove the cap.
- Never mix different types of engine oil. This may adversely affect the lubricating properties of the engine oil.
- Never overfill. Overfilling may result in white exhaust smoke, engine overspeed or internal damage.

The engine oil on a new engine becomes contaminated from the initial break-in of internal parts. The initial 50 hour oil change and filter cleaning is very important.

Drain the engine oil as follows:

1. Make sure the engine is level.
2. Start the engine and bring it up to operating temperature.
3. Stop the engine.
4. Remove the oil cap/dipstick (1, **Figure 3**) to allow the engine oil to drain more easily.

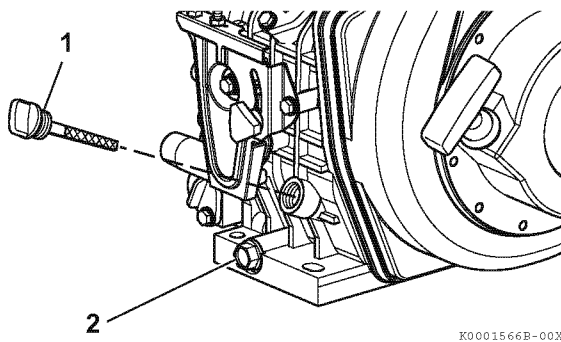
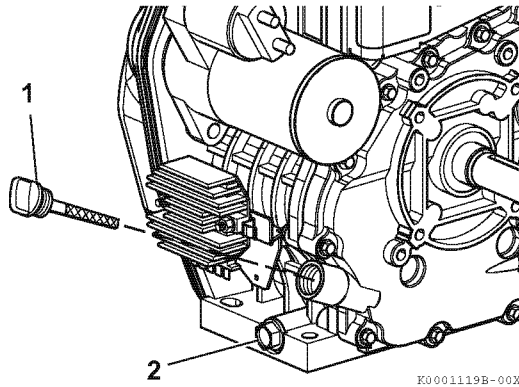


Figure 3

5. Position a container under the engine to collect waste oil.
6. Remove the drain plug located on the bottom of the cylinder block (2, **Figure 3**). Allow oil to drain.
7. After all oil has been drained from the engine, install the drain plug (2, **Figure 3**) and tighten to 14 - 17 ft lbs (19.6 - 23.5 N·m, 2.0 - 2.4 kgf·m).
8. Dispose of used oil properly.

■ Replace engine oil filter

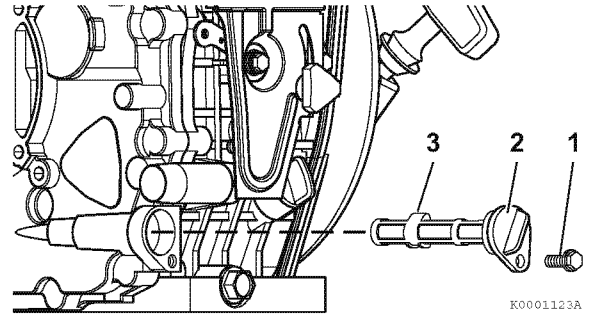


Figure 4

Replace the engine oil filter as follows:

1. Remove the oil filter retaining bolt (1, **Figure 4**).
2. Pull the oil filter cap (2, **Figure 4**) out and remove the oil filter (3, **Figure 4**).
3. Install the new oil filter (3, **Figure 4**).
4. Make sure the oil filter cap is fully seated (2, **Figure 4**).
5. Install and tighten the oil filter retaining bolt (1, **Figure 4**).

Applicable engine oil filter Part No.	
L48V, L70V and L100V	114299-35110

6. Add new engine oil to the engine as specified in *Adding Engine Oil on page 24*.

NOTICE

- Never overfill the engine with engine oil.
 - Always keep the oil level between the upper and lower lines on the oil cap/dipstick.
7. Warm up the engine by running it for 5 minutes and check for any engine oil leaks.
 8. After engine is warm, shut it off and let it sit for 10 minutes.

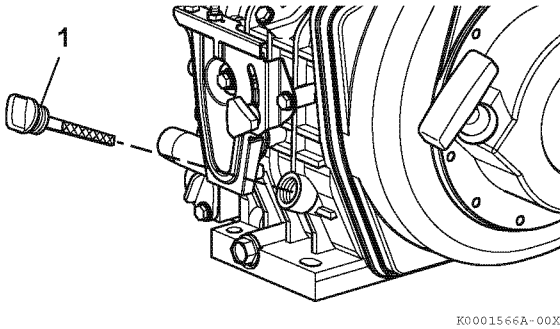
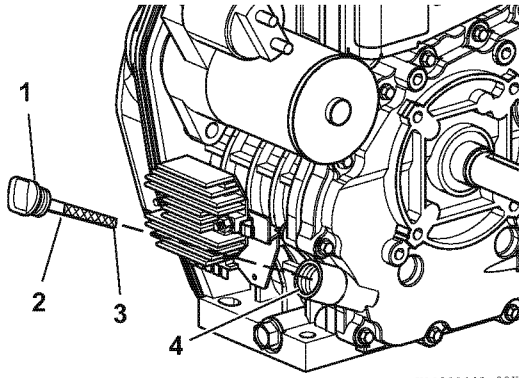


Figure 5

9. Recheck the engine oil level by fully inserting, but not screwing in, the dipstick.
10. Add engine oil (4, **Figure 5**) as needed until the level is between the upper (2, **Figure 5**) and lower lines (3, **Figure 5**) on the oil cap/dipstick (1, **Figure 5**).
11. Replace the oil cap/dipstick (1, **Figure 5**) and tighten by hand. Over-tightening may damage the cap. If any engine oil is spilled, wipe it away with a clean cloth.

Every 50 Hours of Operation

Perform the following maintenance every 50 hours of operation.

- Clean inlet fuel screen

■ Clean inlet fuel screen

⚠ DANGER

Fire and Explosion Hazard!



- Diesel fuel is extremely flammable and explosive under certain conditions.

- When you remove any fuel system component to perform maintenance (such as changing the fuel filter) place an approved container under the opening to catch the fuel.
- Never use a shop rag to catch the fuel. Vapors from the rag are extremely flammable and explosive.
- Wipe up any spills immediately.
- Wear eye protection. The fuel system is under pressure and fuel could spray out when you remove any fuel system component.
- Failure to comply will result in death or serious injury.

1. Clean the area around the fuel cap (1, **Figure 6**).
2. Remove the fuel cap (1, **Figure 6**) from the fuel tank (2, **Figure 6**).

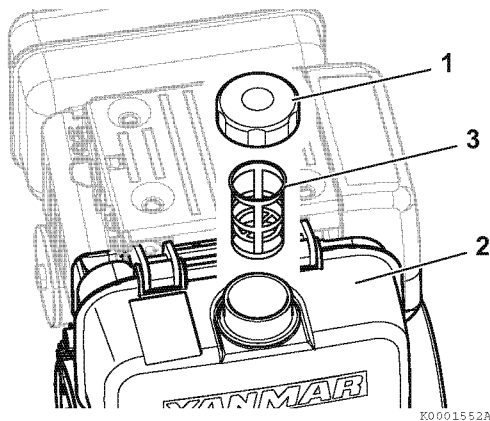


Figure 6

3. Lift out the inlet fuel screen (3, **Figure 6**).
4. Clean the inlet fuel screen or replace if damaged.
5. Install the inlet fuel screen (3, **Figure 6**).
6. Replace the fuel cap (1, **Figure 6**) and hand tighten. Overtightening the fuel cap will damage it.

Applicable inlet fuel screen Part No.	
L48V, L70V and L100V	114299-55110

Every 200 Hours of Operation

Perform the following maintenance every 200 hours of operation.


Clean the air cleaner element every 100 hours of operation.

- Clean air cleaner element (every 100 hours)
- Replace engine oil and clean/inspect engine oil filter
- Check engine speed control
- Drain the fuel tank

■ Clean air cleaner element

▲ CAUTION

Flying Object Hazard!



- Always wear eye protection when servicing the engine and when using compressed air or high-pressure water. Dust, flying debris, compressed air, pressurized water or steam may injure your eyes.

- Failure to comply may result in minor or moderate injury.

NOTICE

- When the engine is operated in dusty conditions, clean the air cleaner element more frequently.
- Never operate the engine with the air cleaner or element(s) removed. This may cause foreign material to enter the engine and damage it.

The engine performance is adversely affected when the air cleaner element is clogged with dust. Be sure to clean or replace the air filter element periodically.

PERIODIC MAINTENANCE

L48V models

The L48V model engines use a “wet” type air filter element. The air filter element is sealed inside a metal housing and coated in a light coat of oil to help filter debris. This type of air filter element is **NOT WASHABLE** and should be replaced every 100 hours or earlier if found excessively dirty.

1. Remove the wing nut (5, **Figure 7**) and gasket (4, **Figure 7**).
2. Remove the air cleaner cover (3, **Figure 7**).
3. Remove the air cleaner element (2, **Figure 7**).
4. Visually inspect the element and determine if replacement is needed. If there is any doubt the element is usable, it should be replaced.
5. Clean the inside and outside of the air cleaner housing and cover (1, 3, **Figure 7**).
6. Reinstall (or install the new) air cleaner element (2, **Figure 7**) into the air cleaner housing.
7. Reinstall the air cleaner cover.
8. Reinstall the wing nut and gasket and hand-tighten. Over-tightening the wing nut will damage the air cleaner assembly.

Air cleaner element Part No.	
L48V	114250-12581

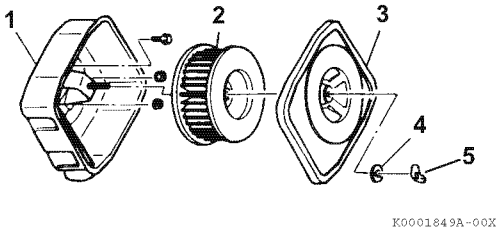


Figure 7

L70V and L100V models

The L70V and L100V model engines use a “dry” type air filter element. The air filter element is an open paper type element. This type of air filter element should be cleaned every 100 hours or earlier if found excessively dirty.

1. Remove the wing nut (1, **Figure 8**).
2. Remove the air cleaner cover (2, **Figure 8**).

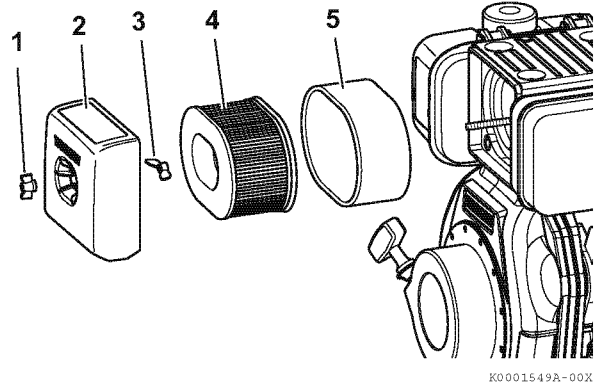


Figure 8

3. Remove the wing nut (3, **Figure 8**).
4. Remove the air cleaner element (4, **Figure 8**) and outer foam element (5, **Figure 8**).
5. Blow air through both elements using 42 - 71 psi (0.29 - 0.49 MPa, 3.0 - 5.0 kgf/cm²) compressed air to remove the particulates. Use the lowest possible air pressure to remove the dust without damaging the elements.
6. If either element is damaged replace both of them (they are not sold individually).

Applicable air cleaner element Part No.	
L70V and L100V	114210-12590

7. Clean the inside of the air cleaner cover (2, **Figure 8**).
8. Install the air cleaner element (4, **Figure 8**) into the air cleaner case. And check accurately that the air filter cartridge is properly fitted and aligned with its own seat of the air filter box.
9. Install the wing nut (3, **Figure 8**) and hand tighten. Overtightening the wing nut will damage the air cleaner assembly.
10. Slide the outer foam element (5, **Figure 8**) over the air cleaner element (4, **Figure 8**).

11. Install the air cleaner cover (2, **Figure 8**).
12. Install the wing nut (1, **Figure 8**) and hand tighten. Overtightening the wing nut will damage the air cleaner assembly.

■ **Replace engine oil and clean/inspect engine oil filter**

NOTICE

- Only use the engine oil specified. Other engine oils may affect warranty coverage, cause internal engine components to seize, or shorten engine life.
- Prevent dirt and debris from contaminating the engine oil. Carefully clean the oil cap/dipstick and the surrounding area before you remove the cap.
- Never mix different types of engine oil. This may adversely affect the lubricating properties of the engine oil.
- Never overfill. Overfilling may result in white exhaust smoke, engine overspeed or internal damage.



- Be environmentally responsible. Follow these procedures for hazardous waste disposal. Failure to follow these procedures may seriously harm the environment.
- Follow the guidelines of the EPA or other governmental agency for the proper disposal of hazardous materials such as engine oil, diesel fuel and engine coolant. Consult the local authorities or reclamation facility.
- Never dispose of hazardous materials irresponsibly by dumping them into a sewer, on the ground or into ground water or waterways.

Change the engine oil every 200 hours of operation after the initial change at 50 hours. Clean and inspect the engine oil filter at the same time. Replace if damaged.
 See *Replace engine oil on page 48 and Replace engine oil filter on page 49.*

■ **Check engine speed control**

After you operate the engine for 200 hours, check the engine speed control. See the instructions for your driven machine for proper adjustments.

1. Check the engine speed control for smooth operation and lubricate or clean as necessary.
2. Check engine speed control for proper adjustments.

■ **Drain the fuel tank**


⚠ DANGER

Fire and Explosion Hazard!



- Diesel fuel is extremely flammable and explosive under certain conditions.
- When you remove any fuel system component to perform maintenance (such as changing the fuel filter) place an approved container under the opening to catch the fuel.
- Never use a shop rag to catch the fuel. Vapors from the rag are extremely flammable and explosive.
- Wipe up any spills immediately.
- Wear eye protection. The fuel system is under pressure and fuel could spray out when you remove any fuel system component.
- Failure to comply will result in death or serious injury.

NOTICE

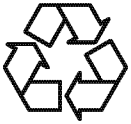

- Be environmentally responsible. Follow these procedures for hazardous waste disposal. Failure to follow these procedures may seriously harm the environment.

- Follow the guidelines of the EPA or other governmental agency for the proper disposal of hazardous materials such as engine oil, diesel fuel and engine coolant. Consult the local authorities or reclamation facility.
- Never dispose of hazardous materials irresponsibly by dumping them into a sewer, on the ground or into ground water or waterways.

1. Position an approved container under the fuel tank to collect the fuel.
2. Remove the fuel cap (1, **Figure 9**).
3. Remove the fuel tank drain plug (2, **Figure 9**) and gasket (3, **Figure 9**) to drain the fuel.

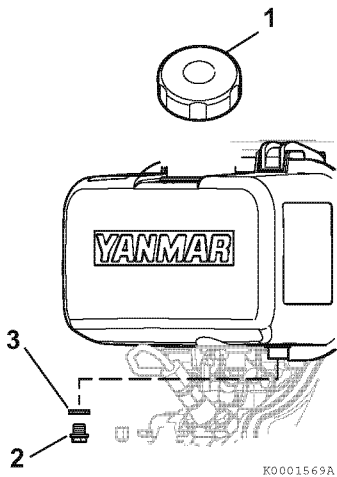


Figure 9

4. Tighten the fuel tank drain plug (2, **Figure 9**) with new gasket (3, **Figure 9**).

Applicable gasket Part No.	
L48V, L70V and L100V	23414-080000

5. Refill fuel tank. Replace the fuel cap (1, **Figure 9**) and hand tighten. Overtightening the fuel cap will damage it.
See Filling the Fuel Tank on page 21.

Every 400 Hours of Operation

Perform the following maintenance every 400 hours of operation.

Replace the air cleaner element every 500 hours of operation. (L70V, L100V)

- **Adjust intake and exhaust valve clearance**
- **Replace engine oil filter**
- **Replace outlet fuel filter**
- **Replace air cleaner element (every 500 hours)**

■ Adjust intake and exhaust valve clearance

⚠ WARNING

High-Pressure Hazard!



- **Avoid skin contact with the high pressure diesel fuel spray caused by a fuel system leak such as a broken fuel injection line. High pressure fuel can penetrate your skin and result in serious injury. If you are exposed to high pressure fuel spray, obtain prompt medical treatment.**

- **Never check for a fuel leak with your hands. Always use a piece of wood or cardboard. Have your authorized YANMAR industrial engine dealer or distributor repair the damage.**
- **Failure to comply could result in death or serious injury.**

Proper operation of the intake and exhaust valves is required to obtain optimum engine performance. See your authorized YANMAR industrial engine dealer or distributor for this service.

■ Replace engine oil filter

See Replace engine oil filter on page 49.

■ Replace outlet fuel filter

⚠ DANGER


Fire and Explosion Hazard!



- Diesel fuel is extremely flammable and explosive under certain conditions.

- When you remove any fuel system component to perform maintenance (such as changing the fuel filter) place an approved container under the opening to catch the fuel.
- Never use a shop rag to catch the fuel. Vapors from the rag are extremely flammable and explosive.
- Wipe up any spills immediately.
- Wear eye protection. The fuel system is under pressure and fuel could spray out when you remove any fuel system component.
- Failure to comply will result in death or serious injury.

NOTICE

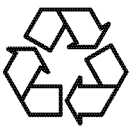

- Be environmentally responsible. Follow these procedures for hazardous waste disposal. Failure to follow these procedures may seriously harm the environment.
- Follow the guidelines of the EPA or other governmental agency for the proper disposal of hazardous materials such as engine oil, diesel fuel and engine coolant. Consult the local authorities or reclamation facility.
- Never dispose of hazardous materials irresponsibly by dumping them into a sewer, on the ground or into ground water or waterways.

1. Position an approved container under the fuel tank to collect the fuel.
2. Remove the fuel cap (1, **Figure 10**).
3. Remove the fuel tank drain plug (2, **Figure 10**) and gasket (3, **Figure 10**) to drain the fuel.

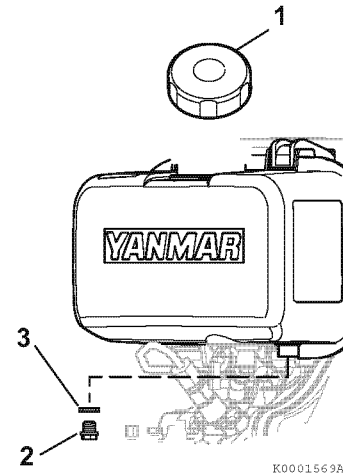


Figure 10

4. Loosen the fuel cock nuts (1, **Figure 11**) on either side of the fuel cock (2, **Figure 11**).
5. Remove and discard the O-ring (3, **Figure 11**).
6. Pull the outlet fuel filter (4, **Figure 11**) and gasket (5, **Figure 11**) out of the fuel tank filler port (6, **Figure 11**).

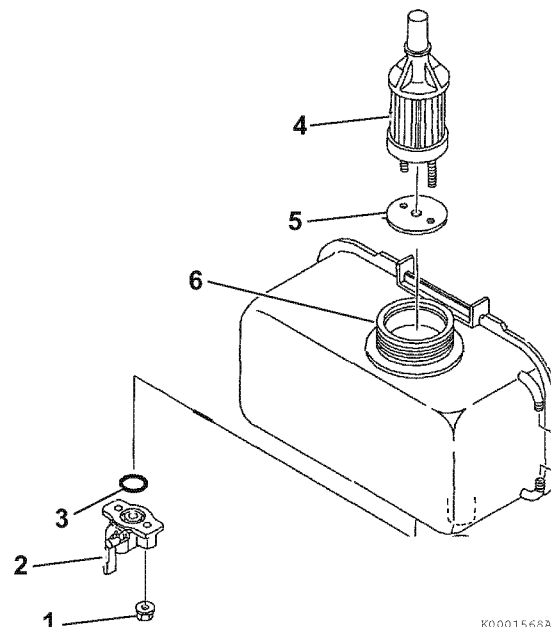


Figure 11

PERIODIC MAINTENANCE

7. Install a new outlet fuel filter (4, **Figure 11**) and gasket (5, **Figure 11**) through the fuel tank filler port (6, **Figure 11**) and seat in the fuel tank.

Applicable outlet fuel filter Part No.	
L48V, L70V and L100V	114250-55122

Applicable gasket Part No.	
L48V, L70V and L100V	114250-55130

8. Install a new O-ring (3, **Figure 11**) on the fuel cock (2, **Figure 11**) and fasten the assembly to the fuel tank using the fuel cock nuts (1, **Figure 11**).

Applicable O-ring Part No.	
L48V, L70V and L100V	24311-000125

9. Tighten the fuel tank drain plug (2, **Figure 10**) with new gasket (3, **Figure 10**).
10. Refill fuel tank. Replace the fuel cap (1, **Figure 10**) and hand tighten. Overtightening the fuel cap will damage it.
See Filling the Fuel Tank on page 21.

■ Replace air cleaner element

See Clean air cleaner element on page 51.

Every 1000 Hours of Operation

Perform the following maintenance every 1000 hours of operation.

• Check compression

■ Check compression

Checking the engine compression is required every 1000 hours to obtain optimum engine performance. See your authorized YANMAR industrial engine dealer or distributor for this service.

Every 1500 Hours of Operation

Perform the following maintenance every 1500 hours of operation.

• Inspect, clean and test fuel injection nozzle

■ Inspect, clean and test fuel injection nozzle

⚠ WARNING

High-Pressure Hazard!



- Avoid skin contact with the high pressure diesel fuel spray caused by a fuel system leak such as a broken fuel injection line. High pressure fuel can penetrate your skin and result in serious injury. If you are exposed to high pressure fuel spray, obtain prompt medical treatment.
- Never check for a fuel leak with your hands. Always use a piece of wood or cardboard. Have your authorized YANMAR industrial engine dealer or distributor repair the damage.
- Failure to comply could result in death or serious injury.

Proper operation of the fuel injectors is required to obtain the optimum injection pattern for full engine performance. See your authorized YANMAR industrial engine dealer or distributor for this service.

Every 2000 Hours of Operation

Perform the following maintenance every 2000 hours of operation.

- Check and replace fuel hoses

NOTICE



- Be environmentally responsible. Follow these procedures for hazardous waste disposal. Failure to follow these procedures may seriously harm the environment.
- Follow the guidelines of the EPA or other governmental agency for the proper disposal of hazardous materials such as engine oil, diesel fuel and engine coolant. Consult the local authorities or reclamation facility.
- Never dispose of hazardous materials irresponsibly by dumping them into a sewer, on the ground or into ground water or waterways.

■ Check and replace fuel hoses

Regularly check the fuel system hoses. If they are cracked or degraded, replace them. Replace the hoses at least every two years, or 2000 hours, whichever occurs first. Consult your authorized YANMAR industrial engine dealer or distributor to replace fuel system hoses.

Every 3000 Hours of Operation

Perform the following maintenance every 3000 hours of operation.

- Check muffler (DOC) appearance (EU regulation certified L48V only)

- Check muffler (DOC) appearance

⚠ WARNING

Burn Hazard!



- Keep your hands and other body parts away from hot engine surfaces such as the muffler, exhaust pipe, turbocharger (if equipped) and engine block during operation and shortly after you shut the engine down. These surfaces are extremely hot while the engine is operating and could seriously burn you.
- Failure to comply could result in death or serious injury.

Check appearance of the muffler (DOC) for serious damage. If any damage or dent is found, contact your authorized YANMAR industrial dealer or distributor.

This Page Intentionally Left Blank

TROUBLESHOOTING

If a problem occurs, stop the engine immediately. Refer to the SYMPTOM column in the Troubleshooting Chart to identify the problem.

NOTICE

If any indicator fails to illuminate when the key switch is in the ON position, see your authorized YANMAR industrial engine dealer or distributor for service before operating the engine.

If any indicator illuminates during engine operation stop the engine immediately. Determine the cause and repair the problem before you continue to operate the engine.

TROUBLESHOOTING

TROUBLESHOOTING CHART

Symptom	Probable cause	Action	Refer to
Indicator turns ON - Engine running			
Engine oil pressure indicator (if equipped)	<ul style="list-style-type: none"> • Low level of engine oil • Too high an oil level 	<ul style="list-style-type: none"> • Check and adjust oil level as necessary 	<i>Checking Engine Oil on page 24</i>
	<ul style="list-style-type: none"> • Clogged engine oil filter 	<ul style="list-style-type: none"> • Replace engine oil filter element 	<i>Replace engine oil on page 48</i>
Battery indicator	<ul style="list-style-type: none"> • Battery failure 	<ul style="list-style-type: none"> • Check battery condition 	<i>Check Indicators on page 25</i>
	<ul style="list-style-type: none"> • Faulty dynamo 	<ul style="list-style-type: none"> • See authorized YANMAR industrial engine dealer or distributor 	–
Indicator does not turn ON - Key switch is turned to ON (OFF → ON)			
	<ul style="list-style-type: none"> • Faulty electrical wiring or faulty indicator 	<ul style="list-style-type: none"> • See authorized YANMAR industrial engine dealer or distributor 	–
Indicator stays ON - Key switch is turned from Start to ON (START → ON)			
Battery indicator stays ON	<ul style="list-style-type: none"> • Faulty alternator 	<ul style="list-style-type: none"> • See authorized YANMAR industrial engine dealer or distributor 	–
Engine oil pressure indicator stays ON	<ul style="list-style-type: none"> • Faulty engine oil pressure switch 		–
Engine does not start			
Starter motor operates but engine does not start	<ul style="list-style-type: none"> • No diesel fuel 	<ul style="list-style-type: none"> • Refuel fuel system 	<i>Filling the Fuel Tank on page 21</i>
	<ul style="list-style-type: none"> • Improper diesel fuel 	<ul style="list-style-type: none"> • Replace with recommended diesel fuel 	<i>Diesel Fuel Specifications on page 20</i>
	<ul style="list-style-type: none"> • Clogged fuel filter 	<ul style="list-style-type: none"> • Replace fuel filter 	<i>Drain the fuel tank on page 53</i>
	<ul style="list-style-type: none"> • Closed fuel cock 	<ul style="list-style-type: none"> • Check the fuel cock position 	–
	<ul style="list-style-type: none"> • Poor fuel injection 	<ul style="list-style-type: none"> • See authorized YANMAR industrial engine dealer or distributor 	–
	<ul style="list-style-type: none"> • Compressed air leakage from intake/exhaust valves 		–
	<ul style="list-style-type: none"> • Faulty engine stop solenoid (if equipped) 		–

Symptom	Probable cause	Action	Refer to
Starter motor does not operate or rotates too slowly (engine can be turned manually)	• Battery needs charging	• Check electrolyte, recharge	<i>Check battery (if equipped) on page 42</i>
	• Faulty cable connection at battery terminals	• Clean terminals, retighten	–
	• Faulty starter switch	• See authorized YANMAR industrial engine dealer or distributor	–
	• Faulty starter motor		–
Engine cannot be manually turned	• Inner parts seized or damaged		–
White or black exhaust smoke			
Black exhaust smoke	• Engine overloaded	• Reduce load	–
	• Clogged air cleaner element	• Clean element or replace	<i>Clean air cleaner element on page 51</i>
	• Improper diesel fuel	• Replace with recommended diesel fuel	<i>Diesel Fuel Specifications on page 20</i>
	• Faulty spraying of fuel injection	• See authorized YANMAR industrial engine dealer or distributor	–
	• Excessive intake/exhaust valve clearance		–
White exhaust smoke	• Improper diesel fuel	• Replace with recommended diesel fuel	<i>Diesel Fuel Specifications on page 20</i>
	• Faulty spray pattern of fuel injection	• See authorized YANMAR industrial engine dealer or distributor	–
	• Fuel injection timing delay		–
	• Engine burning oil		–

TROUBLESHOOTING

TROUBLESHOOTING INFORMATION

If your engine does not operate properly, refer to the troubleshooting chart or consult your authorized YANMAR industrial engine dealer or distributor.

Supply the authorized YANMAR industrial engine dealer or distributor with the following information:

- Model name and serial number of your engine
- The driven machine type (tractor, generator, skid steer loader), manufacturers name, model and serial number
- How long the engine has been in service (the number of engine hours or the number of calendar months)
- Operating conditions when problem occurs:
 - Engine rpm
 - Color of exhaust smoke
 - Type of diesel fuel
 - Type of engine oil
 - Any abnormal noises or vibration
 - Operating environment such as high altitude or extreme ambient temperatures, etc.
- Engine maintenance history and previous problems
- Other factors that contribute to the problem

LONG TERM STORAGE

This section of the *Operation Manual* describes the procedures necessary to place the engine into long term storage (six months or longer) and how to place it back into operation.

BEFORE YOU PLACE THE ENGINE IN LONG TERM STORAGE

⚠ DANGER

Explosion Hazard!



- Never check the remaining battery charge by shorting out the terminals. This will result in a spark and may cause an explosion or fire. Use a hydrometer to check the remaining battery charge.
- If the electrolyte is frozen, slowly warm the battery before you recharge it.
- Failure to comply will result in death or serious injury.

⚠ WARNING


Burn Hazard!



- Batteries contain sulfuric acid. Never allow battery fluid to come in contact with clothing, skin or eyes. Severe burns could result.
- Always wear safety goggles and protective clothing when servicing the battery. If contact with the skin and/or eyes should occur, flush with a large amount of water and obtain prompt medical treatment.
- Failure to comply could result in death or serious injury.

⚠ CAUTION

Flying Object Hazard!



- Always wear eye protection when servicing the engine and when using compressed air or high-pressure water. Dust, flying debris, compressed air, pressurized water or steam may injure your eyes.
- Failure to comply may result in minor or moderate injury.

NOTICE

The engine shall not be cleaned using high pressure washer or steam. The sealing are not capable to withstand and water can easily enter the engine.

1. Perform the next Periodic Maintenance procedure. For example, if there are 10 hours before the 200 hour maintenance, you should do the maintenance before you place the engine in storage.
See the PERIODIC MAINTENANCE SCHEDULE on page 40.
2. Start the engine. Allow the engine to idle, or run without load if there is no idle position in your application, for approximately 3 minutes and then stop the engine.
3. L48V engines only -
 - 1- Remove the oil plug (1, **Figure 1**).

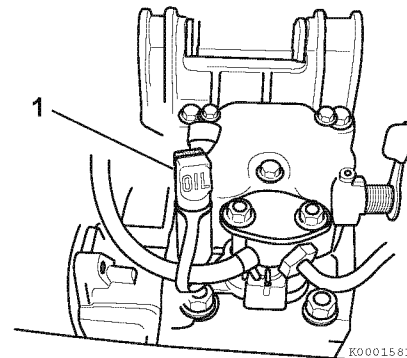


Figure 1

- 2- Add 2 cc of engine oil to the oil port (1, **Figure 2**).

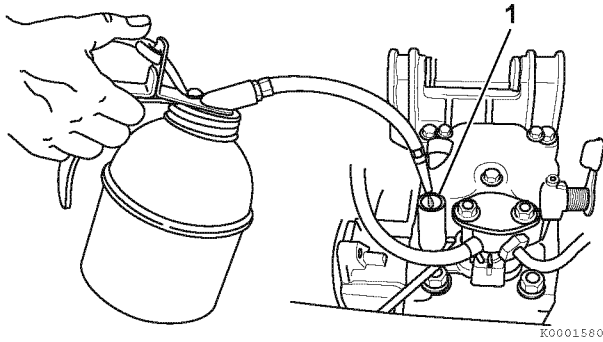


Figure 2

- 3- Reinstall the oil plug (1, **Figure 1**).
4. Drain the engine oil while the engine is still warm and fill with new oil. *See Replace engine oil on page 48.*
5. Recoil start engines:
 - 1- Push the decompression lever down and hold it while slowly pulling the recoil starter 2 or 3 times. Do not start the engine.
 - 2- Pull the decompression lever up. Pull the recoil starter slowly and stop when there is resistance. This procedure closes the intake and exhaust valves in the compression position and helps prevent rust.
6. Electric start engines:
 - 1- Set the decompression lever at the non-compression position. Do not move the speed control lever to the START or RUN position.
 - 2- Turn the key to the start position and turn the engine for 2 to 3 seconds. Do not start the engine.
 - 3- Pull the decompression lever up.
7. Drain the fuel tank or make sure it is completely full.
8. Protect the air cleaner, muffler and electrical components (dynamo, starter motor, switches) from water and dust.
9. Disconnect the negative (-) battery cable to prevent the battery from discharging.
10. Check the battery fluid and add distilled water as required.
11. Charge the battery once a month during storage.
12. Clean the engine and store it in a dry place.
13. Rotate the engine without starting every four to six months.

RETURNING THE ENGINE TO SERVICE

1. Perform the *DAILY CHECKS* on page 25.
2. Start the engine. Allow the engine to idle, or run without load if there is no idle position in your application, for approximately 5 to 10 minutes while you check for:
 - 1- proper oil pressure.
 - 2- fuel, engine oil, or coolant leaks.
 - 3- proper operation of the indicators and/or gauges (if equipped).
3. Avoid prolonged operation at minimum or maximum engine speeds and loads for the remainder of the first hour of operation.

SPECIFICATIONS

GENERAL

Description of Model Number (Made in Italy)

	1	2 (*1)	3	4	5	6	7	8	9	10	11
L 48											
L 70	V	6	A	F	1	T	1	A	A	S	1
L 100											

- Remarks (big oil pan, special specifications, etc.)
- Fan case
- FO tank and FO pump
- Muffler
- Speed control device
- Air cleaner
- Starting motor + recoil
- PTO + flange
- RPM
- Engine series
- Base name

Note: *1: L48V that comply to the European emissions standard are indicated "V" after No. 2 ("L48V*V").

SPECIFICATIONS

Engine Speed Specifications

Available engine speed	Intended uses
3600 min ⁻¹ (rpm)	Agricultural, constructive, industrial machines, pumps
3000 min ⁻¹ (rpm)	Generator sets

Engine General Specifications

Type	Vertical, air cooled, 4-cycle diesel engine
Combustion system	Direct injection
Starting system	Electric starting and/or recoil starting
Cooling system	Fan on flywheel
Lubricating system	Forced lubrication with trochoid pump
Direction of rotation	Counterclockwise viewed from PTO side

Note:

- The information described in *PRINCIPAL ENGINE SPECIFICATIONS* is for a “standard” engine. To obtain the information for the engine installed in your driven machine, please refer to the manual provided by the driven machine manufacturer.
- Engine rating conditions are as follows (SAE J1349, ISO 3046/1):
 - Atmospheric condition: Room temperature 77 °F (25 °C), atmospheric pressure 29.53 in. Hg (100 kPa, 750 mmHg), relative humidity 30 %
 - Fuel temperature at fuel injector pump inlet: 77 °F (25 °C)
 - With air cleaner, muffler: YANMAR standard
 - After engine break-in period.
 - 1 PS = 0.7355 kW

PRINCIPAL ENGINE SPECIFICATIONS

Engine Specifications

Engine model		L48V	L70V	L100V				
Type		4-stroke, vertical cylinder, air-cooled diesel engine						
No. of cylinders		1						
Bore x stroke	mm	70 x 57		78 x 67		86 x 75		
Displacement	L	0.219		0.320		0.435		
Engine rotation speed	min ⁻¹	3600	3000	3600	3000	3600	3000	
Continuous rated output	kW	3.1	2.7	4.3	4.0	6.2	5.7	
	PS	4.2	3.7	5.8	5.4	8.4	7.7	
Max. rated output (net)	kW	3.4	3.0	4.8	4.4	6.8	6.3	
	PS	4.6	4.1	6.5	6.0	9.2	8.6	
High idling	min ⁻¹	3800	3175	3800	3175	3800	3175	
Engine weight (dry)	With electric start	kg	32.5		41.0		53.5	
	Without electric start	kg	27.5		36.0		48.5	
Cooling system		Forced air by flywheel fan						
Lubricating system		Forced lubrication with trochoid pump						
Starting system		Electric start/recoil start						
Dimensions (L x W x H)	mm	332 x 389 x 425		378 x 422 x 453		412 x 471 x 494		
Engine oil pan capacity	Dipstick upper limit	L	0.80		1.05		1.60	
	Dipstick lower limit	L	0.55		0.65		1.00	
Fuel tank capacity (Limit value)	L	1.9		2.7		4.7		

Note: This table shows the specification of the model certified by the EU emission regulation.

This Page Intentionally Left Blank

YANMAR

Head Office:
YANMAR POWER TECHNOLOGY CO., LTD.
1-32 Chayamachi, Kita-ku, Osaka, Japan
<https://www.yanmar.com>

Yanmar America Corporation
101 International Parkway
Adairsville, GA 30103, U.S.A.
TEL: +1-770-877-9894 FAX: +1-770-877-9009
<https://www.yanmar.com/us/>

Yanmar Europe B.V.
Brugplein11, 1332 BS Almere -de Vaart
The Netherlands.
TEL: +31-36-5493200 FAX: +31-36-5493209
<https://www.yanmar.com/eu/>

Yanmar Asia (Singapore) Corporation Pte Ltd.
4 Tuas Lane, Singapore 638613
TEL: +65-6861-3855 FAX: +65-6862-5189
<https://www.yanmar.com/sg/>

Yanmar Engine (Shanghai) Corporation Ltd.
Room 1101-1106, No.757 Mengzi Road,
Huangpu District, Shanghai 200023 PRC
TEL: +86-21-2312-0688 FAX: +86-21-6880-8090
<http://www.yanmar-china.com/cn/>

Yanmar South America Industria De Maquinas Ltda.
Av. Presidente Vargas 1400, Indaiatuba, S.P., Brazil, CEP: 13338-901
TEL: +55-19-3801-9224 FAX: +55-19-3875-3899, 2241
<https://www.yanmar.com/br/>

As of April 1, 2020

OPERATION MANUAL

L48V, L70V, L100V

1st edition: February 2018
2nd edition: September 2018
2nd edition 1st rev.: October 2018
3rd edition: April 2020

Issued by: YANMAR POWER TECHNOLOGY CO., LTD.
Edited by: YANMAR GLOBAL CS CO., LTD.

YANMAR

YANMAR POWER TECHNOLOGY CO., LTD.

<https://www.yanmar.com>

0ALV0-EN0022
Apr.2020
PRINTED IN JAPAN